Avtek TS 7 Mate interactive monitor Android user manual



Table of contents

Introduction	5
Getting the system up and running for the first time	5
Basic operation	8
General settings	9
Source selection	9
Eye Care function	10
Volume control	10
Brightness adjustment	10
Side toolbar	10
Basic functions	11
Recent tasks	12
Split screen / Split-screen	12
Quotation menu	14
Screenshot menu	15
Freeze / zoom function	17
Other tools	18
Voting function/air class	18
Voting	20
True/false	23
First come, first served.	23
Selector - selecting random person(s) among those logged on	24
Comments	24
Exporting results	25
Note - Quotation application	26

Basic operation	26
Menu	30
System settings	32
Web browser	34
Finder - the file manager	35
Basic operation	35
Changing/setting the wallpaper	37
Desktop settings	39
Widgets	39
Adding dashboards	39
Screenshare Pro	40
Compatible operating systems	40
Mobile devices	41
Computer	43
Using applications	45
Calculator	46
Calendar	46
Cloud drive	46
Keeper	47
NewPipe - application to play YouTube videos	47
Screen lock	48
Screen lock application	48
Other locking options	48
Visualiser	49
System upgrade	50


Introduction

The operating system installed in Avtek interactive monitors is a customised version of the popular Android system. This system is used for basic operations on the monitor (e.g., changing sources or volume levels) and provides a range of useful tools for education and business, which will be discussed later. The device features a touchscreen. To operate it, simply touch the screen.


Initial system start-up

At the initial start-up, the user is allowed to configure the basic functions of the monitor.

1. Select the system language.

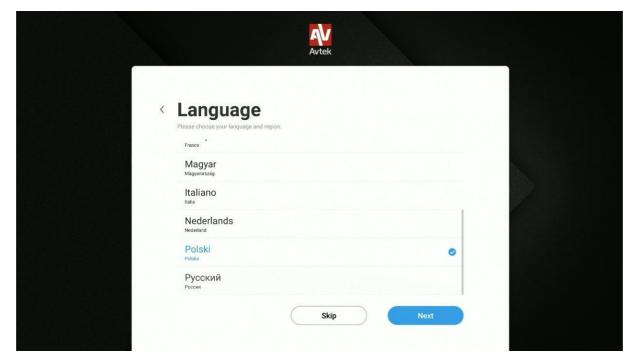


2. Connect to a WiFi or Ethernet network to access the Internet.

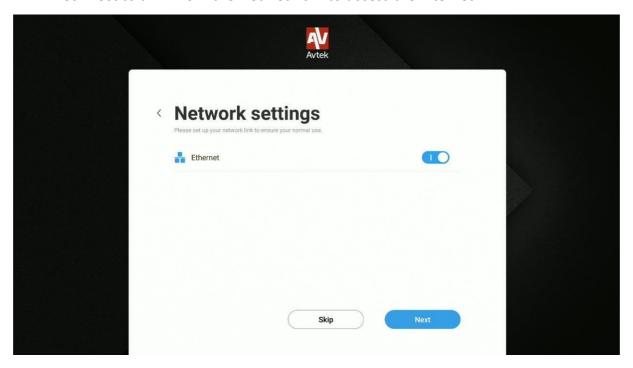


NOTE: to connect to a wireless network, make sure the WiFi dongle or module is properly connected.


3. Configure the date and time of the device.

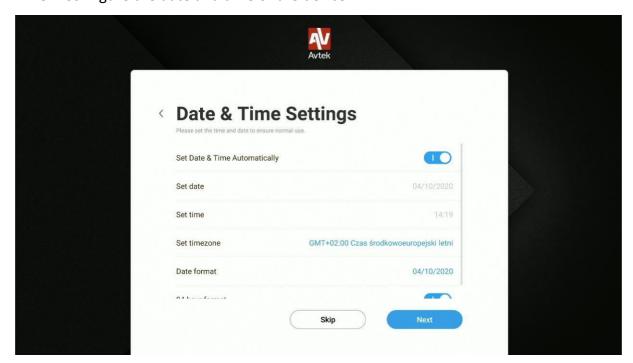

4. Give the device a name.

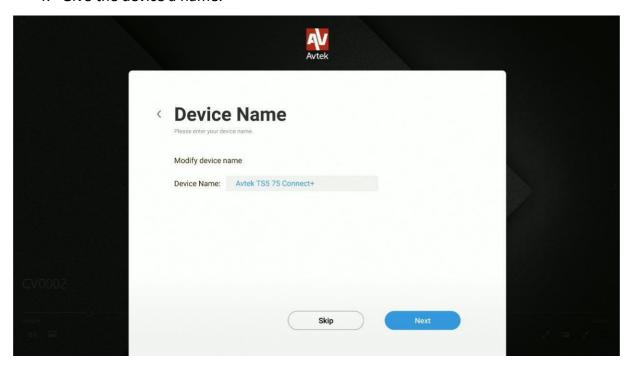

5. The device is now ready for use.

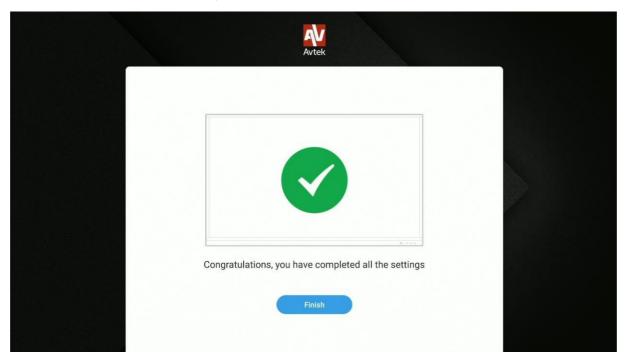

Basic operation

The home screen is displayed every time the monitor is started.



System icons:

Available desktop icons

Access to all installed applications

- Ethernet connection
- WiFi connection
- Flash drive connected
- Avtek Share

To navigate through the main menu:


- Tap the desired item.
- Use the side toolbar.

General settings

To open the General settings, tap and drag the bottom of the screen or select an icon from the side toolbar.



Source selection: All image sources are available on the main General settings screen. Active sources are indicated by the blue icon • . To change the source, simply tap the selected icon.

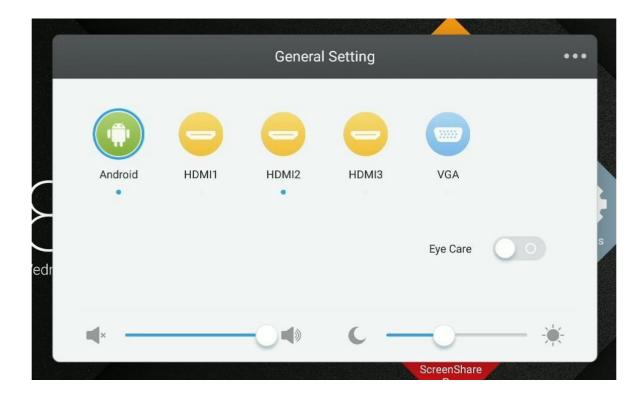

NOTE: the PC option is only available when the PC module is properly installed in the socket.

Eye Care function: Short wavelength blue light rays from displays can cause eye fatigue, damage the retina and affect vision over time. The Eye Care function is designed to take care of your eyes by reducing the intensity of blue light.

To activate Eye Care, slide the switch to the right.

Volume adjustment: To adjust the volume level, tap and move the volume slider.



Brightness adjustment: To adjust the brightness level, tap and move the brightness slider.



Side toolbar

To bring up the toolbar, tap the icon on one side of the screen.



Basic functions



- To hide the toolbar, tap
- To go back to the previous screen, tap



_ To return to the home screen, tap 🞧



_ To view all active applications, tap



To go directly to the Note application, tap 🦲



_ To open the note menu, tap 🥝



- _ To open the screenshot menu, tap 📵
- To freeze an image and zoom in on a selected part of it, tap
- _ To open the additional tools menu, tap 🔀




- To open the General settings, tap




Recent tasks

To view all the applications running in the background, tap



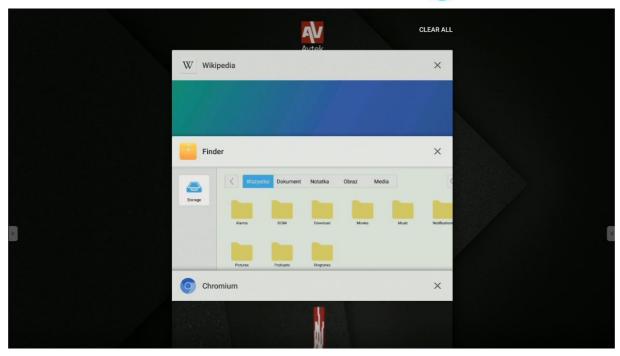

 - Scroll through the list of applications by tapping and dragging up and down.
- To select an application, tap on it.
- To remove an app from the list (disable it), swipe left or right.
- To clear the entire list, scroll up and tap.




Split screen / Split-screen


To enable two applications side by side:



- 2. Select Recent Tasks 📵 .
- 3. Tap and HOLD on the selected application.
- 4. Drag an application to one of the highlighted blocks on the sides.

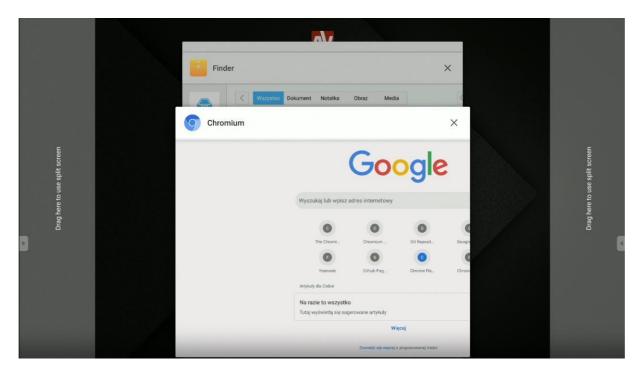

5. Among the enabled applications, you can also select the one that will be displayed on the other half.

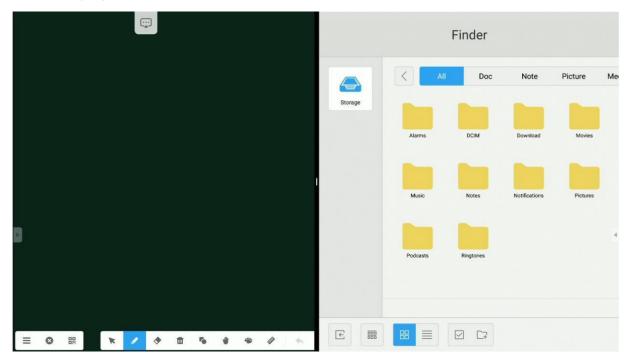


Quotation menu

To open the note-taking menu, tap




The note-taking tools allow you to take notes on any image from any source.

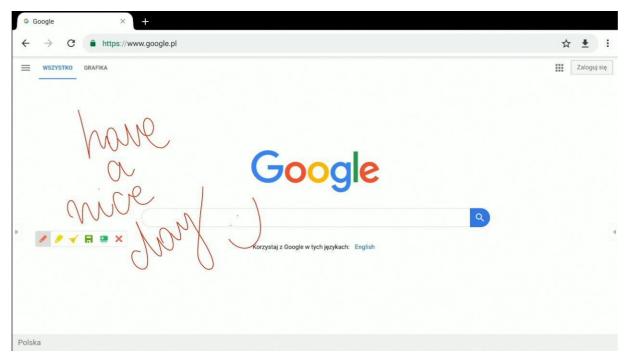

- Tap the pen icon to take notes on the screen. Touching the icon several times changes the colour of the marker.
- _ Tap the highlighter icon to write with a semi-transparent marker. Tapping the icon several times changes the colour of the highlighter.

NOTE: To erase notes, you can also put your whole hand on the screen to activate the eraser function.

 - Tap the eraser icon to delete all the notes you have created.
- Tap the floppy disk icon to save the created notes as a PNG file.
- _ Tap the Note icon to send the entire image with the notes to the Note application.



Screenshot menu

To open the screenshot menu, tap 📵



- Tap the icon icon to enlarge the screenshot area to the entire desktop.

NOTE: To adjust the area according to your preference, press, hold and drag the white

icons.

- Tap the icon to send the selected snippet to the Note application.
- Tap the icon to create a QR code. Scanning the QR code will allow you to download the selected image snippet to your device.

NOTE: The interactive monitor and the scanning equipment must be connected to the same WiFi network.

NOTE: Tapping on the QR code will enlarge it. This allows the code to be scanned from a greater distance.

- Tap the icon to exit the screenshot menu.



NOTE: It is possible to take a snapshot of a section of the screen on which there are notes created through the notes menu. To do this, first turn on the quotation menu, then slide out the side toolbar and select the screenshot menu again.



Freeze/zoom function

To freeze the image and zoom in on a selected part of the image, tap



- Tap the 🤁 icon to zoom in on the image.
- Tap the Qicon to zoom out.
- Tap the **E**icon to return the screen to its original scale.
- Tap the icon to turn off the freeze/zoom function.

Other tools

To open the additional tools menu, tap 🔀



- tap the icon to activate the reflector function. This function can be used to focus the listener's attention on a selected part of the screen.
- Tap the icon to activate the timer function.
- Tap the icon to enable the stopwatch function.
- Tap the nicon to enable the voting/air class function.

Voting/air class function

Tap the icon to enable the voting/air class function. The screen will display QR code window.



To use the tool you need to:

- 1. Connect the interactive monitor to an available network.
- 2. Enable the WiFi function on the devices that will be used to answer the questions. Then connect them to the same WiFi network as the interactive monitor.

NOTE: All devices must be connected to the same WiFi network!

- 3. Scan the QR code or type the address displayed below it into your web browser.
- 4. Type your name and press Enter to join the class.
- 5. On the interactive monitor, press Enter to start the session.

PLEASE **NOTE**: The voting function is for answers only. Questions can be asked, e.g. as slides in the Note application, notes on pictures or verbally.




The tool has the following functions:


- Voting, with a choice between single-choice and multiple-choice questions.
- True/false question.
- First come, first served indicates the first person to report through their device.
- Selector selects a random person among those logged in. Multiple people can also be selected at once.
- Enables/disables the ability for participants to send comments.
- Enables:
 - Re-display the QR code.
 - Export results to an XLS file.
- Exit the voting tool.

Voting


Example: A question asked in the Note app, answer mode is single-choice voting.

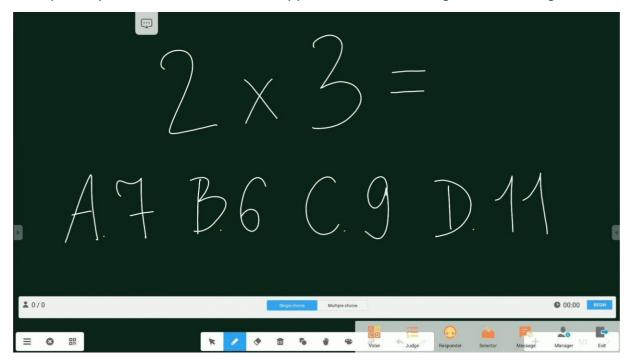


1. To start receiving participants' responses (votes), tap "Start". The names of participants who submit their answer (vote) will appear as blue icons in the list.

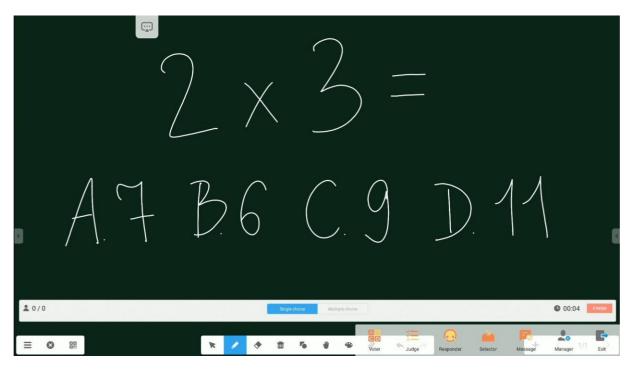

2. To finish collecting responses, tap "Finish". A statistics screen will be displayed.

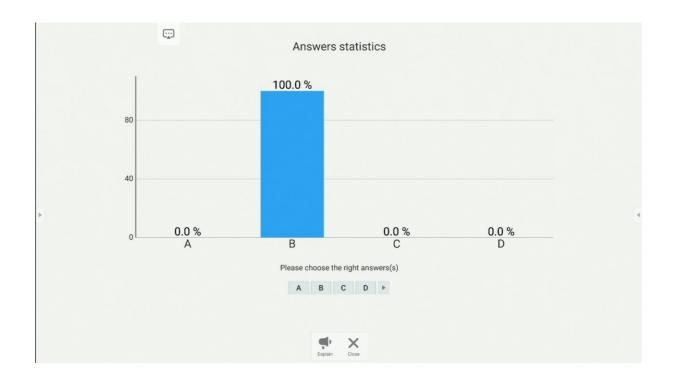


3. Here you can also indicate the correct answer.

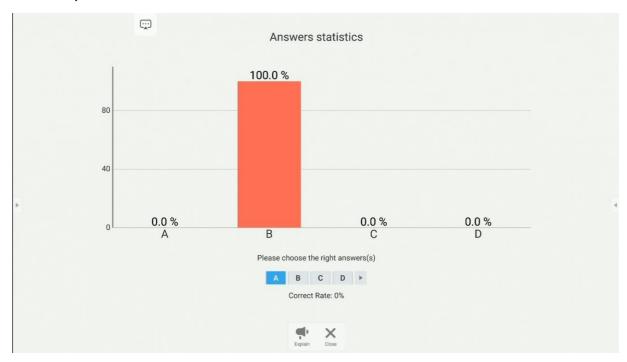

4. Tapping the "Explain" button will return you to the whiteboard.


Participants will still have a preview of their answers while following the explanations provided on the board by the facilitator.

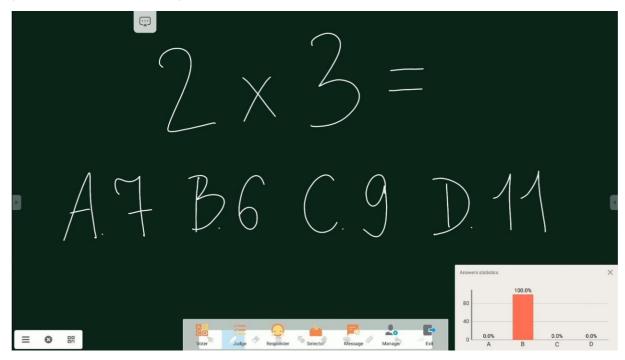

True/false

Similar to voting, this mode allows for quick 'true/false' questions.

First come, first served

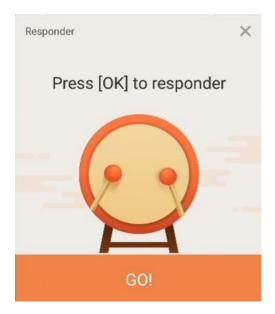



The first participant to submit an answer wins, and their name will be displayed on the screen.

This function can be used, for example, when volunteering for an answer or a reflex quiz.

Selector

The application will indicate one or more people from among all those connected.

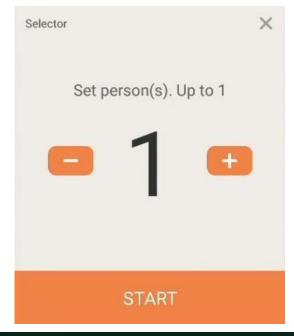

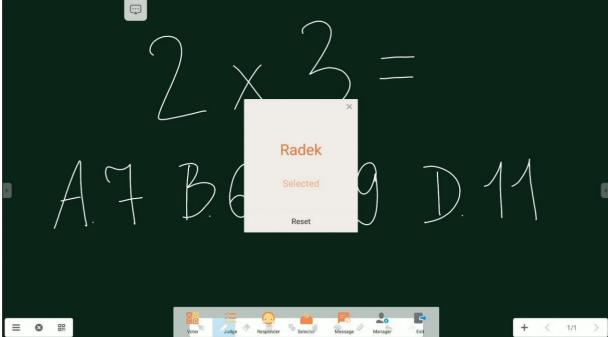


Comments

Participants have the option of sending text comments, which will appear on the screen.

Exporting results

To export the results for later evaluation after all questions have been asked, tap on the icon and then the Export report button.

The report will be saved as an XLS file in the Air Class folder on the monitor.

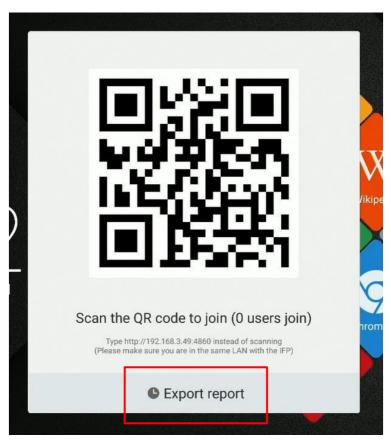


Note application



icon on your desktop to launch the Note application.

The application is a virtual whiteboard on which you can write, draw and take notes on inserted images.

Basic operation

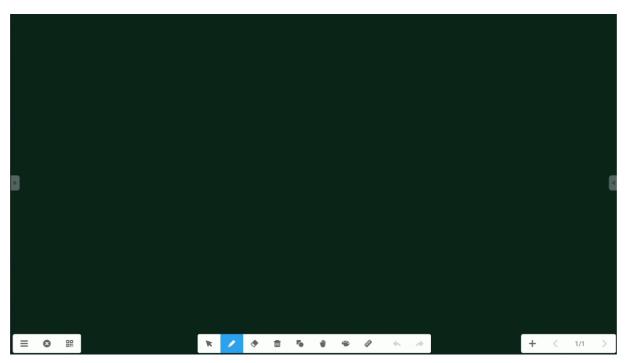


Icon	Name	Function
=	Menu	Opens a tab with more functions.
8	Exit	Exits the Note application.
88	QR code	Provides a QR code so that participants can download all notes to their devices.

*	Cursor	NOTE: The devices and the monitor must be on the same WiFi network. NOTE: Clicking on the QR code enlarges it, allowing it to be scanned from a greater distance. The cursor allows you to select and move objects on the whiteboard.
	Pen	The pen allows you to write and draw on the whiteboard. Tap a second time to select the type, thickness and colour of the pen. Depending on the monitor model, it is also possible to set different pen types, thickness and colour for the included
♦	Eraser	Allows you to erase notes and objects. NOTE: It is also possible to erase notes (but

		not objects) by placing your whole hand on the screen.	
	Bin	Erases all objects from the page.	
6	Objects	Drawing objects.	
		Tap a second time to select the type and colour of object to	
		be drawn.	
		2D 3D ×	
*	Hand	The hand function allows you to move the entire page and	
===>		zoom in and out.	
4	Paint mode	Paint mode allows you to replicate drawing with	
		brush and crayon, as well as to manually mix colours.	
		, M &	
A	Mathematical	Allows the insertion of mathematical tools: a ruler, two types	
Ø.	tools	of eccentric and a protractor.	
		× ••• ••	
4	Undo	Undoes the last change.	

-	Renew	Cancels the last undo.		
+	Add page	Allows you to add another page.		
<	Page back	Takes you back to the previous page.		
>	Page forward	Opens the next page.		
1/1	Page counter	Indicates how many pages are open and which one you are currently on. When clicked, it displays a menu with a preview of each page.		

Menu

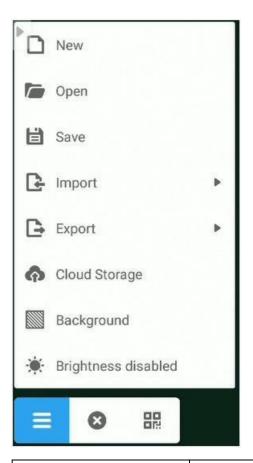


Icon	Name	Function
☐ New	New	Opens a new document.
Open	Open	Allows you to open an existing document.
[Import	Import	Allows you to import another file into the page. Image, PDF, and SVG files can be imported. Image image image image imported. Image image image imported. Image image image imported. Image
Export	Export	Allows you to export notes to other formats.

♠ Cloud Storage	Cloud	Allows you to send your notes to the cloud. More about this tool under Cloud Drive.
Background	Background	Allows you to change the background colour, pattern and to add any of your images as a background.
		Color Texture Custom
→ Brightness disabled	Brightness	Cancel OK Enables/disables the automatic
	on/off	brightness control. When the function is activated, the monitor reduces the brightness when someone is writing on it to avoid eyestrain.

System settings

To open the System settings, tap the



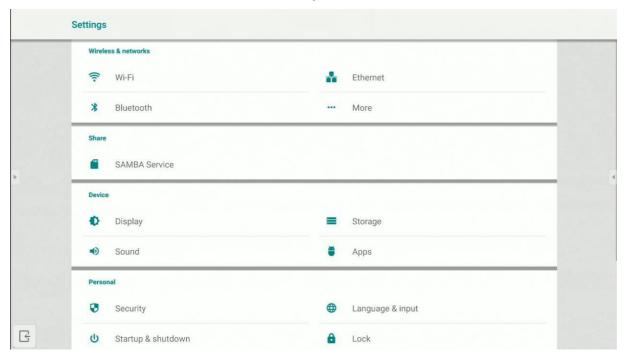


Icon	Function
? Wi-Fi	Configure the wireless network settings.
Ethernet	Configure the wired network settings.
≯ Bluetooth	Configure Bluetooth settings.
••• More	Access more settings.
SAMBA Service	Enable/disable the SAMBA service.
Display	Display settings.
Sound	Audio settings.
Storage	Memory settings.

*	Apps	Application settings.
•	Security	Advanced security and permissions settings.
ம	Startup & shutdown	Power on/off settings, timer settings.
	Language & input	Language and input settings.
a	Lock	Set or change the monitor lock password.
	Input Setting	Source settings, editing of source names.
O	Other Settings	Other settings.
(3)	Date & Time	Date and time settings.
1	About device	Device information.
0	System Update	Manual check of system update.

Web browser


To open the web browser, tap the



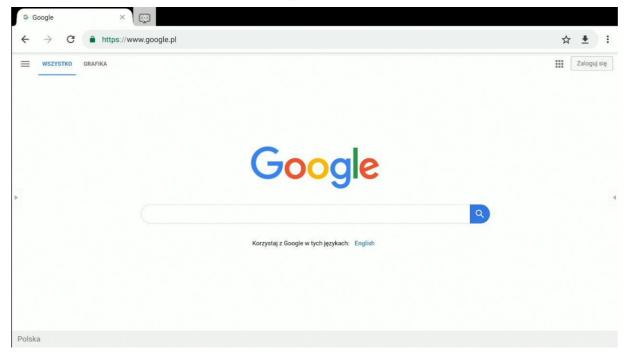


Finder - file manager

 Basic operation



Finder is a file manager - thanks to it, you can access files in the monitor's memory and, for example, on attached USB drives.

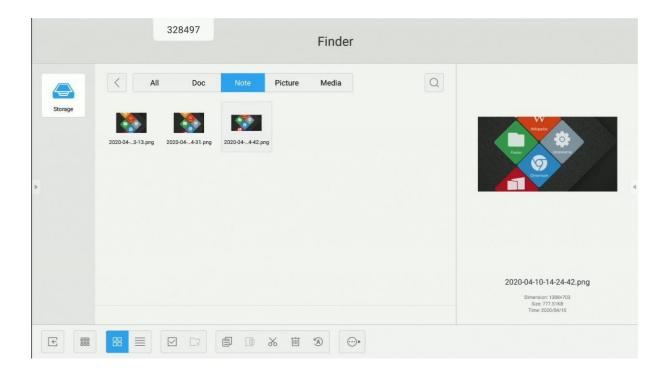


Icon	Name	Function
E	Exit	Closes the Finder.
000	Sort	Selects the type of sorting.
	Thumbnails	Display as thumbnails.
	List	Display as a list.

	Select	Enable multiple object selection mode.
	New	Create a new folder.
	folder	
	Сору	Copy the selected object.
	Paste	Paste the object from the clipboard.
%	Cut	Cut the selected object.
Î	Delete	Delete the selected object.
'A	Rename	Rename the selected file/folder.
	name	
⊕ ▶	Share	Share the selected file:
		- to a plugged-in USB stick
		- via QR code
		2020-044-42.png Sweep to share and read. Click to enlarge QR Code Make sure the device is on the same LAN NOTE: Devices must be connected to the same WiFi network.

Changing/setting the wallpaper


To change the wallpaper of the interactive monitor, you first need to prepare an image which will be the new wallpaper. Such a file can be downloaded from the Internet or prepared on a USB drive.

1. Select the file that will be set as the new wallpaper and double-tap it.

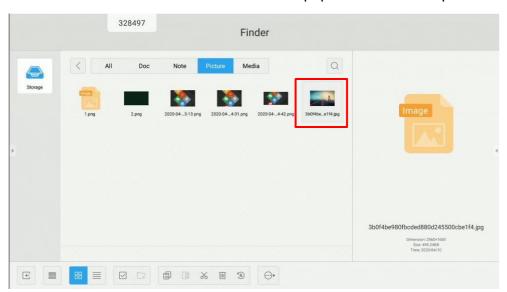




3. Tap Set to wallpaper.

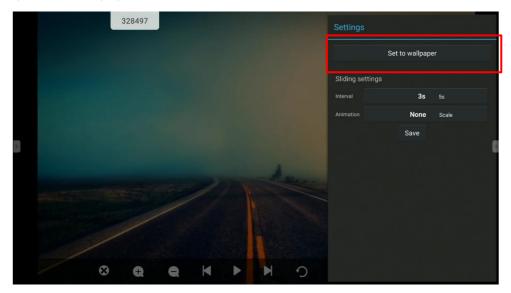

4. Crop the picture and tap Save to set as wallpaper.

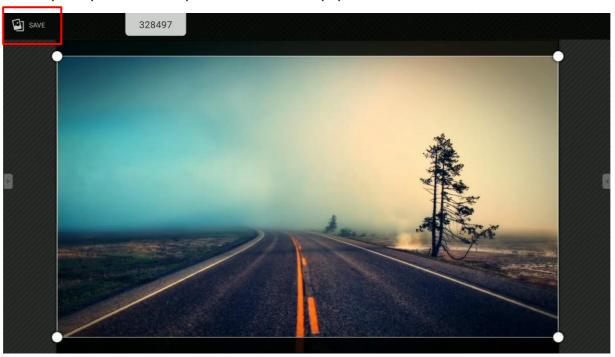



Desktop settings

Widgets

You can add application shortcuts and widgets to desktops (except the first one). To add widgets to a desktop, do the following:

- 1. Tap and hold the desktop.
- 2. Tap the icon



NOTE: Widgets depend on the applications installed. The manufacturer of the interactive monitor does not guarantee the correct operation of every application and every widget.

Adding desktops

To add another desktop, drag an application shortcut onto it.

Screenshare Pro


ScreenShare Pro is a wireless image transfer application. It allows you to display content from mobile devices and computers on an interactive monitor via a WiFi connection.

NOTE:

- Devices must be connected to the same WiFi network.
- Make sure you are connected to the internet. A fast internet connection ensures that the image transfer function works quickly.



icon to activate the application.

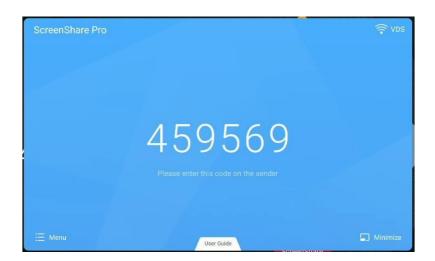

Compatible operating systems:

- Windows 7, 8, 10
- MAC OSX 10.8 or later
- iPhone iOS 9.0 or later
- Android 5.0 or later

Mobile devices


1. Download the ScreenShare Pro app.

On Android and iOS devices, the ScreenShare Pro app can be downloaded from the Google Play and App Store.

An alternative option is to press the User Guide button and scan the QR code displayed there.



2. Input the code displayed on the monitor into the app to connect to the monitor.

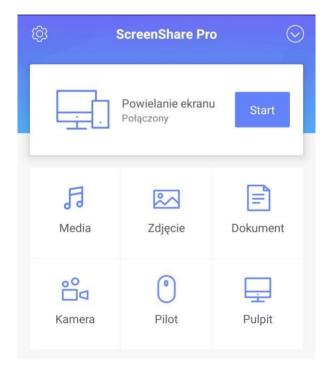

- Tap the Start icon to start transferring the image from the mobile device to the monitor.

NOTE: Four people can simultaneously send an image to the monitor.

To stop the transfer, click the icon.

- Icons

Media

Photo


Document

allow you to send audio and video
files, photos and documents to the monitor respectively. In this mode, the file will
be fully buffered before being displayed.


- To enable camera image transfer mode, tap the camera icon. This mode allows you to choose between the quality and smoothness of the transfer, and to freeze the image of interest.
- Tap to use your mobile device as a touch-sensitive trackpad monitor control.
- Tap Desktop Sync to transfer the monitor image to your phone, with the possibility of touch control.

Computer

1. Download the application by scanning the QR code, or entering the address displayed below the code into your browser.

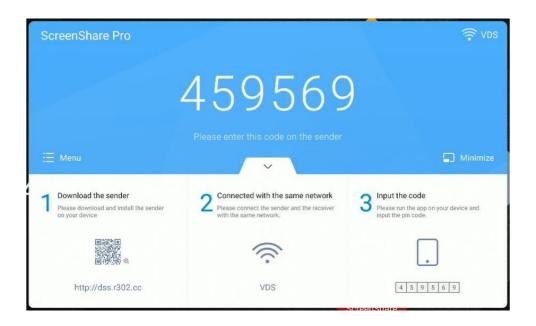

2. Input the code displayed on the monitor into the app to connect to the monitor.

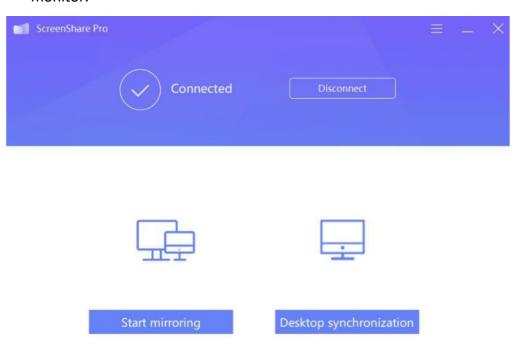

- Tap Start mirroring to start transferring the image from your computer to the interactive monitor.
- Tap Desktop synchronization to start transferring the image from the interactive monitor to your computer.

Using the application


IMPORTANT: The built-in Android operating system is not a standard system. It has been modified and optimised to work like an interactive monitor. As a result, Google Play is not available.

Installed applications may not function correctly. The manufacturer of the monitor does not guarantee the correct operation of any application installed independently by the user.

To access other applications, select the icon at the bottom right of the corner of the screen.

To install an application yourself, download the APK installation file of the application and run it on the monitor.

You may need to unlock the installation from unknown sources. To do this, go to Settings, Security tab, and enable the "Unknown Sources" option.

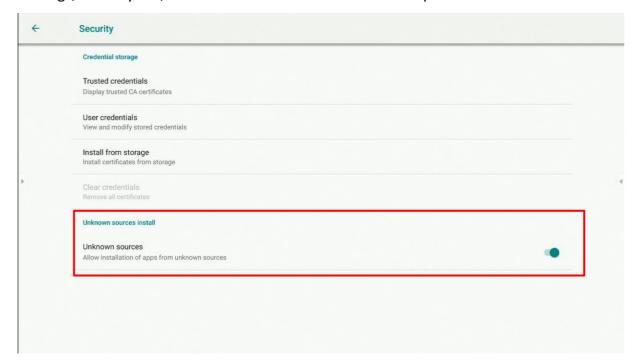

Calculator

To enable the calculator, tap the icon


Calendar

To enable the calendar, tap the iicon

Cloud drive

To enable Cloud Drive, tap the oicon.

The Cloud Drive app allows you to add your Google Drive or OneDrive account and quickly upload files from your monitor to it.

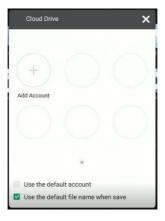


To use the app:

- 1. Tap "Add Account"
- 2. Select a cloud service: Google Drive or OneDrive

NOTE: An internet connection is required.

3. Log in to your account by following the on-screen instructions.

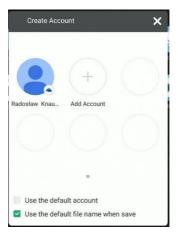


Keeper

To activate the Keeper application, tap the



The Keeper application is used to optimise the use of device memory and empty the system of unnecessary data.

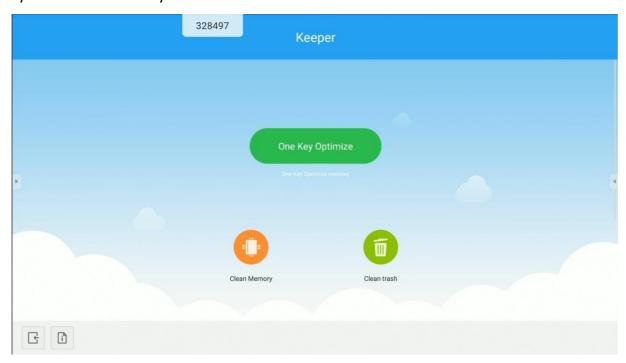

NewPipe - an application to play YouTube videos

To enable the NewPipe application, tap on the




Screen lock

Screen lock application

Tap on the Screen Lock application icon. A page allowing you to set a password will be displayed (if it hasn't already been set).



If a password has previously been set, the screen will be locked. To unlock it, enter the correct password.

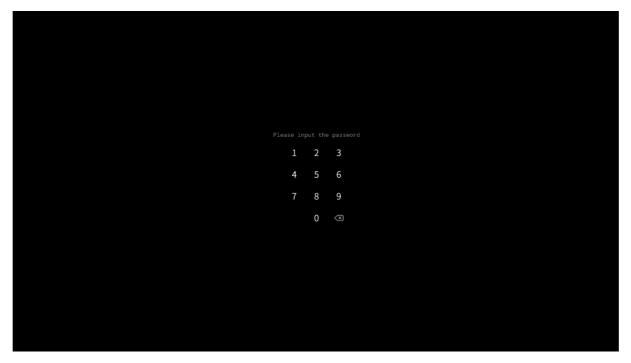


Other locking options

There are other options for locking the monitor. To find out more, please visit download.vidis.co.uk and the read the article "Avtek TS - touch and monitor lock".

Visualiser

This application enables displaying an image from a visualiser or a camera with the possibility of freezing the image, splitting the screen to display several images and annotating them.

NOTE: The manufacturer does not guarantee co-operation with every camera and visualiser. The connected visualiser or USB camera must be a HID standard device, i.e. it does not require drivers to be installed for operation.

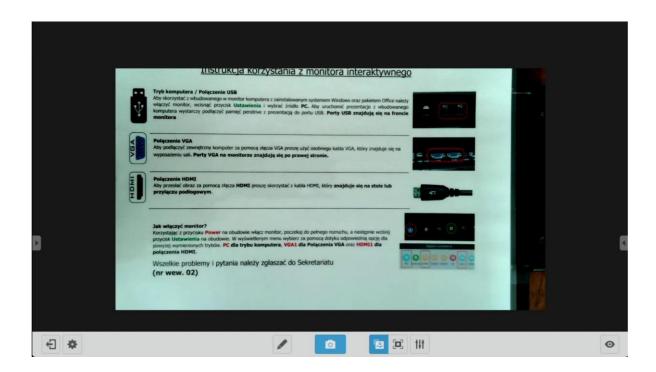

System upgrade

Avtek TouchScreen monitors can update the software via the Internet. When the monitor is connected to the internet, the system will automatically check for new updates.


NOTE: Updates relate to the monitor's internal software, including its features, not the Android system version. The Android system version is fixed and unchangeable during the monitor's lifetime.

To manually check for updates, go to Settings and tap on the "System update"



System Update icon, then "Check for updates" Check update



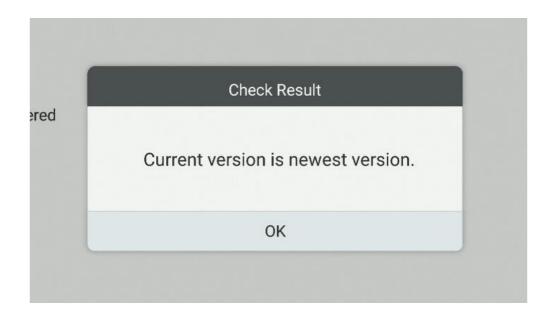

If an update is available, the system will start downloading it. Once downloaded, the update will be ready for installation, which takes approximately 5 minutes.

ATTENTION: *Under no circumstances should you switch off the monitor during the update.*

Thank you for using the Avtek TS 7 Mate interactive monitor Android user manual!



The manufacturer reserves the right to change the content of this manual without notice.