Avtek TS 8 lite G user manual for Android operating system

Table of contents

Introduction

 The operating system installed on Avtek interactive monitors is a modified version of the popular Android system. It supports both basic operation of the screen monitor (e.g., switching between input sources or controlling audio volume), as well as offering a number of useful features and tools valued by both business and educational users, each of which is presented in this manual.

The device is equipped with a touch screen and can be operated by simply touching the surface of the screen.

To change the language, click on the clock in the upper right corner. This will open the settings. Go to System/Language and select your preferred language from the list.
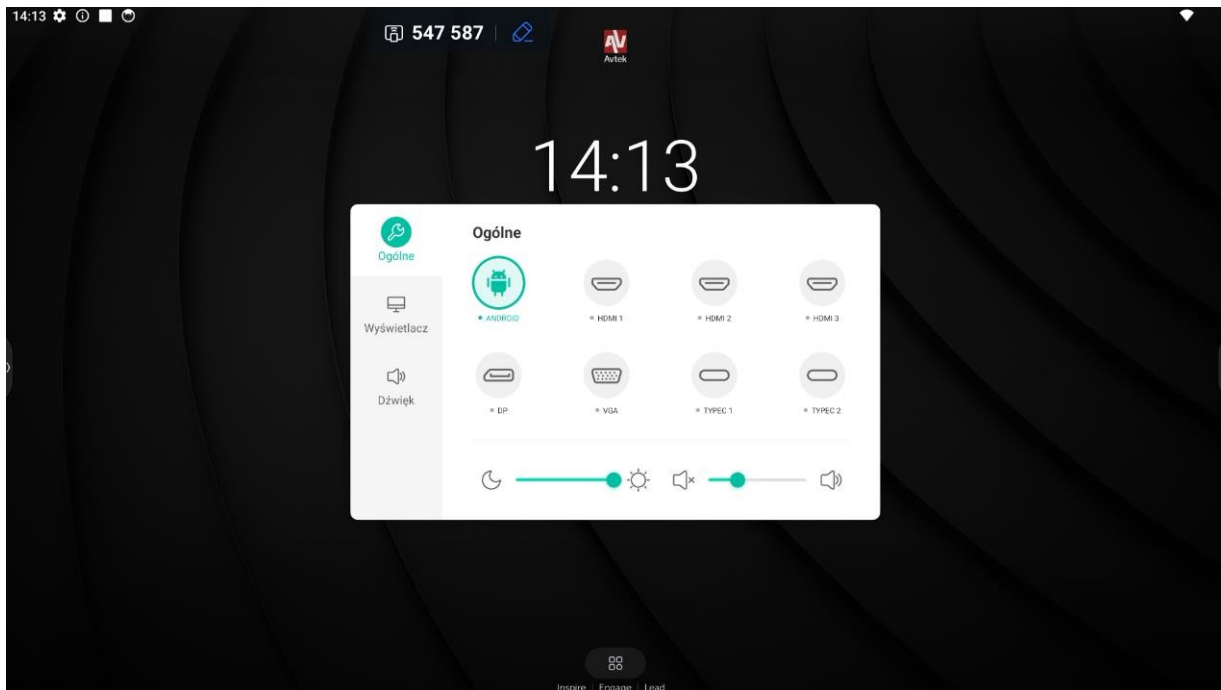
Basic service

After   each   launch   display screen   main screenwill be displayed automatically.
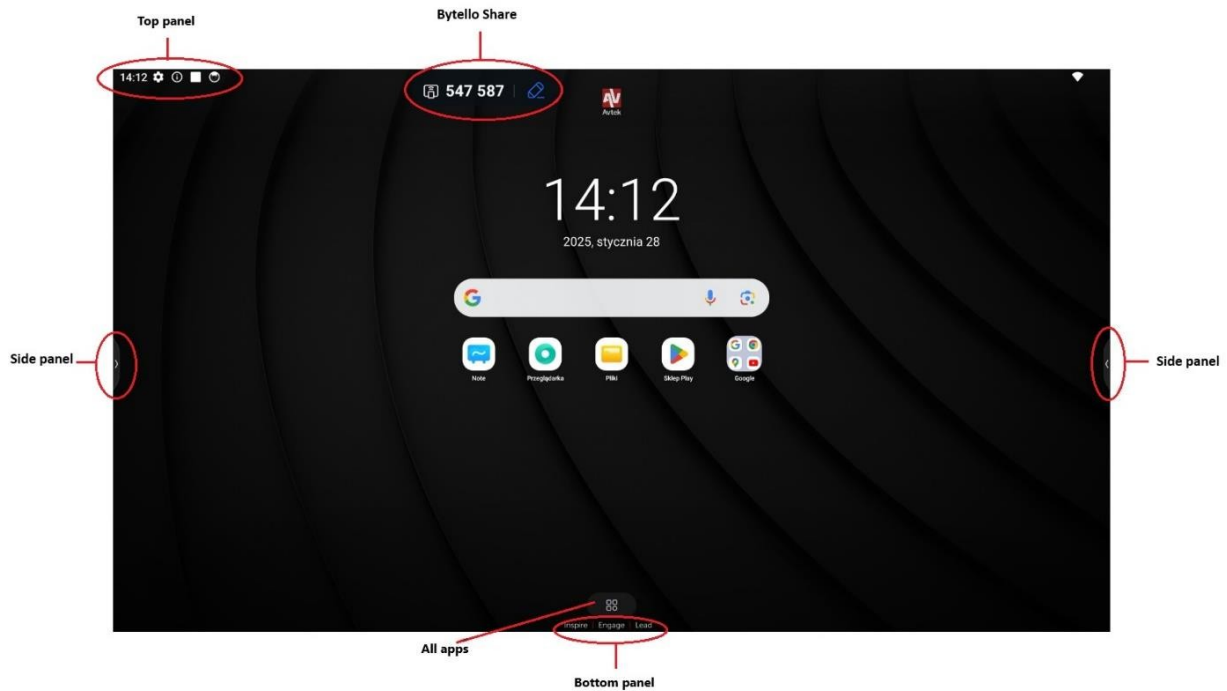
To navigate through the main menu: - tap

the item you want to use, or - use the side

toolbar.

General settings

To configure general settings, tap the lower working part of the screen and swipe up.

Select source (INPUT) : on the **General Settings** main screen, all image sources will be displayed as icons. Sources that are currently available will be highlighted with a highlighted green dot. To change the source, simply touch the icon of the source you want to use.

NOTE: *The PC will only be available as an image source if the OPS module has been properly connected to its port.*

Eye Care : Blue light waves, which are a component of all colors of light emitted by device displays, can cause eye fatigue and even lead to retinal damage and ultimately contribute to vision loss. Eye Care is a feature designed to relieve the user's eyes by reducing the intensity of blue light waves emitted by the display.

To enable Eye Care, move its slider to the right.

Adjust audio volume : to adjust audio volume, touch and move the volume control slider.
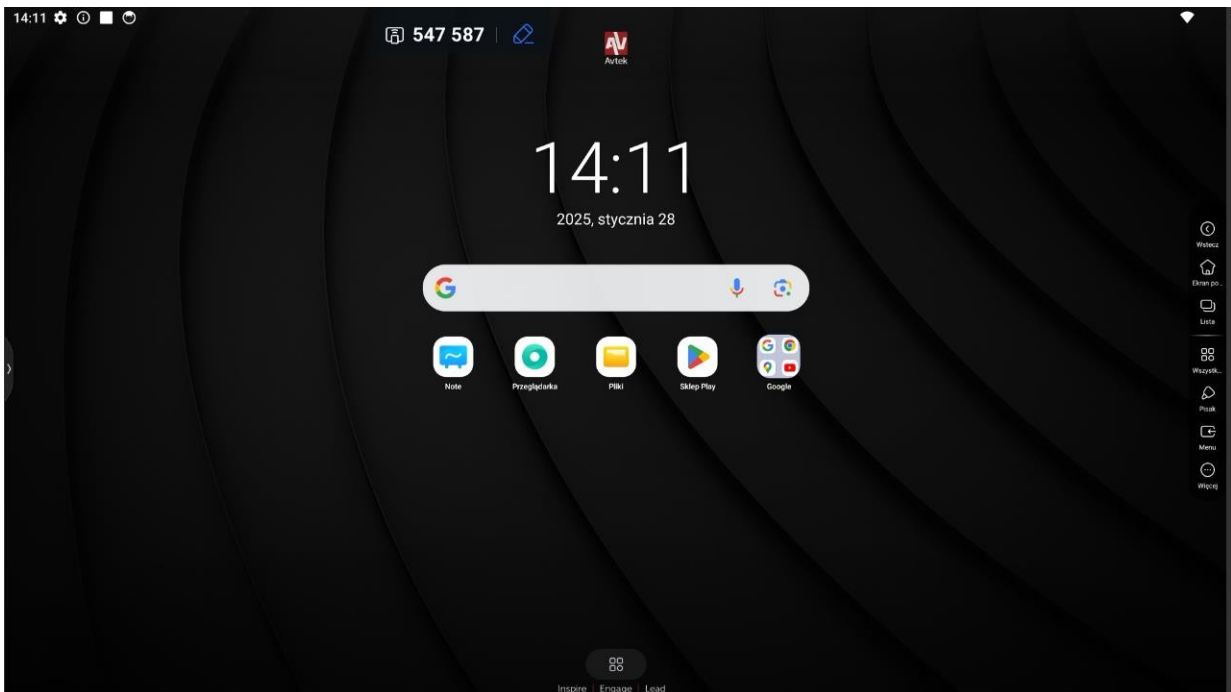
Brightness adjustment : to adjust the brightness of the display, touch and move the

brightness adjustment slider.

Side toolbar

To display the side bar tools, tap at side
edge of the screen.

Basic service

- To return to the previous screen or undo the last action performed in the supported

  application (if it can be undone),

- To return to the home screen,

- To view all running applications,
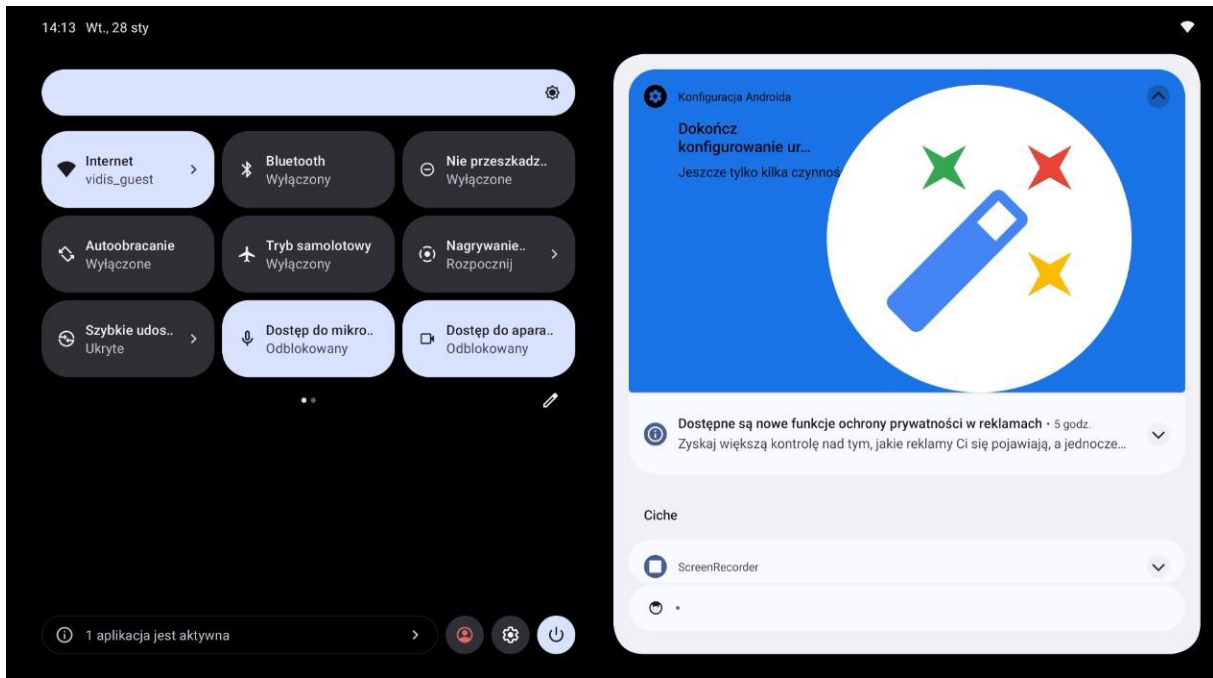
- To enable quoting features on any source,

- To open a menu with a list of available applications, ![Wszystk icon]

- To open and customize **tools** and **help** menus, ![tools icon]

Top panel

The top panel can be called up by moving a finger or any carrier down from the top frame of the work area.

Split screen / multi-window mode

The Avtek UX 3.0 display firmware allows you to display up to 4 applications

simultaneously in windowed mode. To do this, you need to perform the following steps:

1. Open ![settings icon]

    Then go to the **Personal** tab and select the **multi-window mode**.

2. Restart the display to save the changes.

3. After restarting the display, open any application. Then tap and hold the title bar (top edge) of that app.

4. Drag the app to one of the highlighted scales on the sides of the screen:

   - Top edge - full screen

   - Left or right edge - ½ screen

   - One of the corners of the screen - ¼ of the screen

Annotation menu

To open **the annotation** menu,

Tools   for   create   annotations   enable   making   notes   on image displayed from any source.
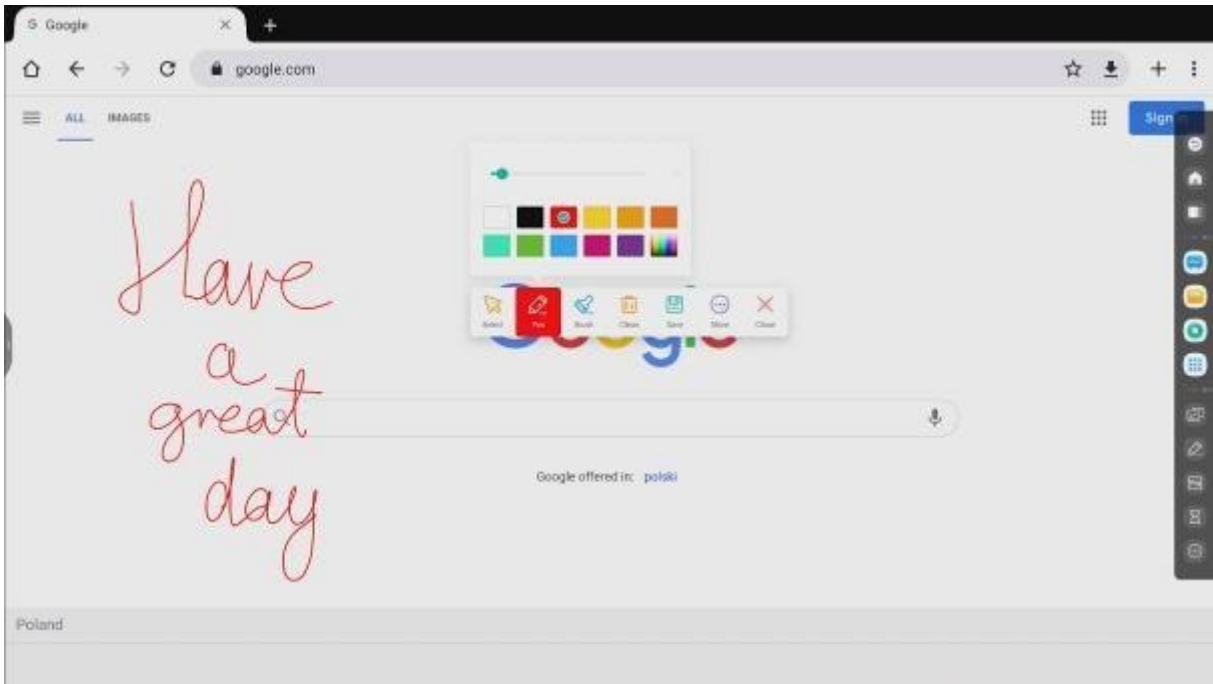
- To take notes on the screen, tap the **pen** icon**.** To change the color and size of the pen, tap the **pen** icon**.**

- To write with a translucent highlighter, tap the **highlighter** icon. To change the highlight color, tap the highlighter icon**.**

NOTE: *To erase notes, you can touch the screen with your whole hand, which will activate eraser mode.*

- To delete all annotations at once, tap the "**Clear**" icon.

- To save all annotations to a PNG image file, tap the "**Save**" icon.

- Previously saved notes can be edited the "**Finder**" icon.

- To insert an annotation screen into the Note application, click the "**Insert**" icon.

- To share the annotation screen via QR code, use the "**Share**" icon.

- To upload the annotation screen to the cloud use the "**Cloud**" icon.
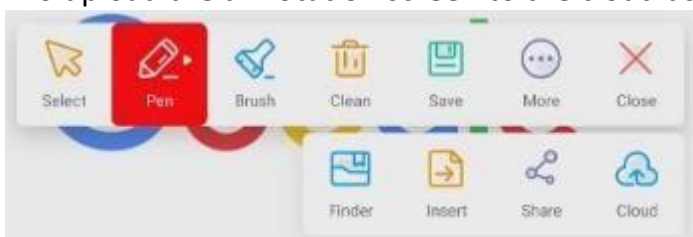
Bytello Share

To open **Bytello Share**, tap the icon.　　　🔲 **H8W BXQ**

or　　　🔳

Bytello Share allows you to connect your display and compatible devices wirelessly. The connection can be established using the Bytello App installed on another device or via Chromecast, Airplay or Miracast, which can be found in the Bytello settings menu.
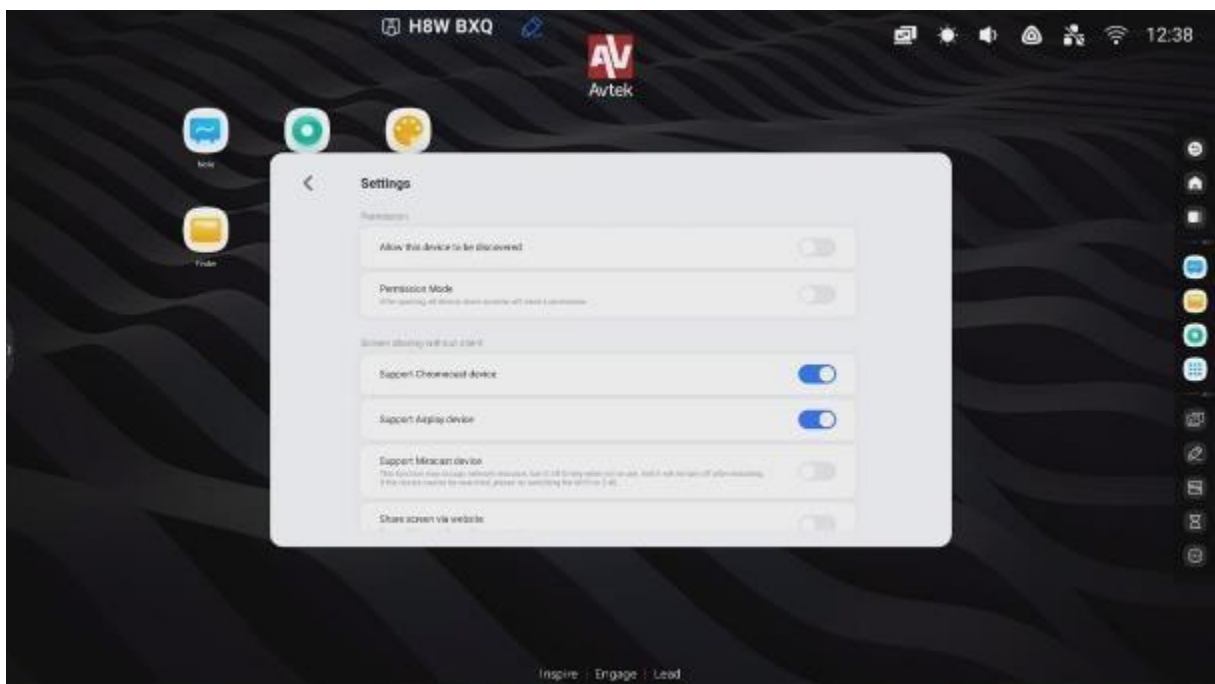
Full instructions for Bytello Share can be found below, in the "Bytello Share" section.

Timer

To open **the Timer** touch
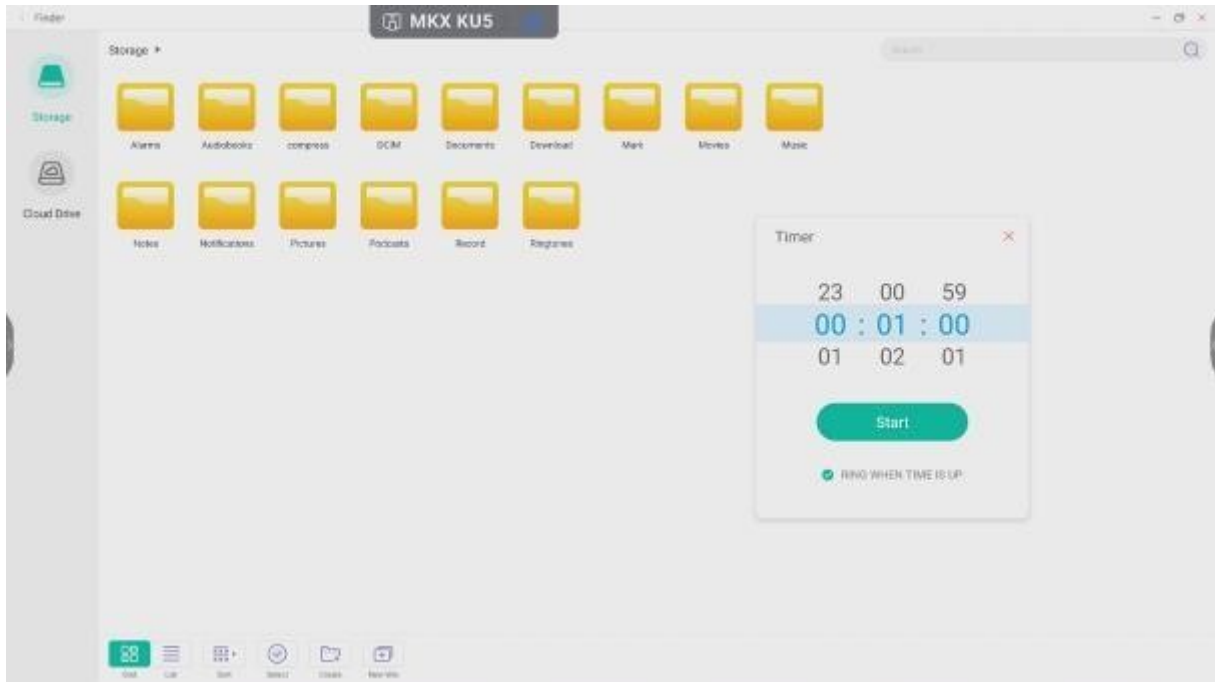
Screenshot menu

To open **the Screenshot** menu, tap
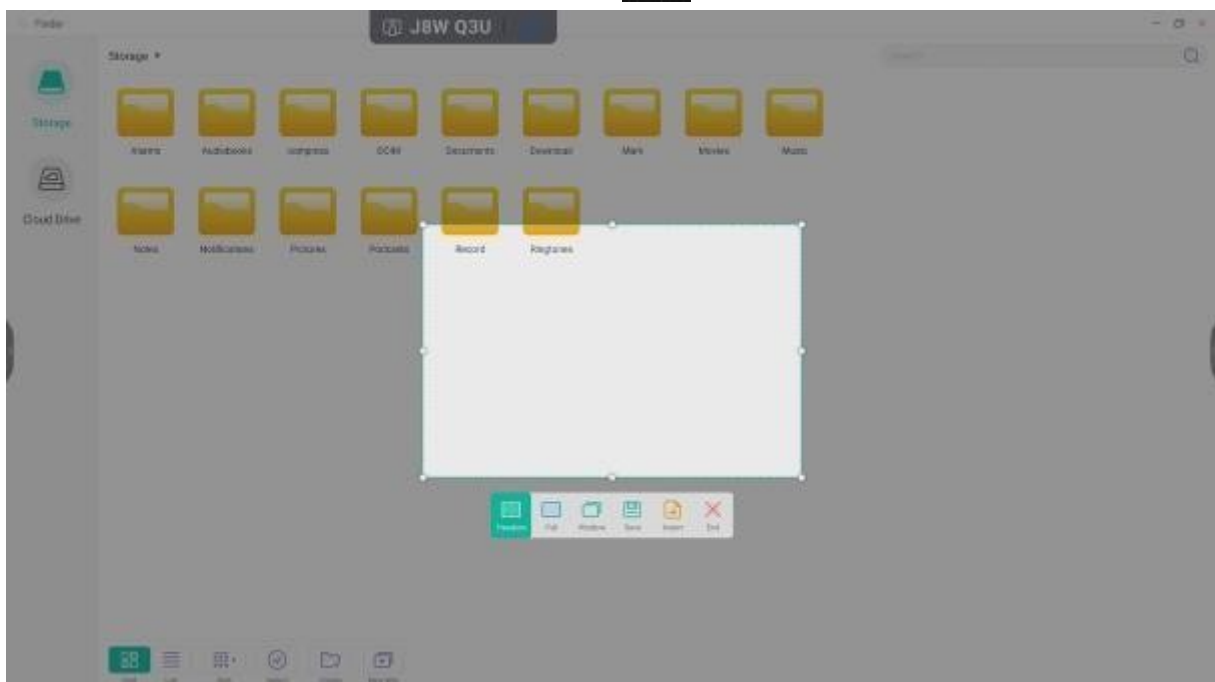
The default mode is "Freedom"

NOTE: *To customize the screenshot area to your preference, tap and hold its white handle icons,* *and then drag them as required.*

- Tap "**Full**" to take a screenshot of the entire screen.

- Tap "**Window**" to limit the screenshot to the current view.

- Tap "**Save**" to save the screen area selected as the screenshot area as a PNG image file.

- Tap "**Insert**" to send the screenshot to the Note app.

- Tap "**Exit**" to exit **the Screenshot** menu**.**

NOTE: *You can also take a screenshot of a part of the screen that contains some notes made using the* **Annotation** *menu. To do this, first turn on the* **Annotation** *menu and use it to take notes, then reopen the side toolbar and open the menu from it.*

Freeze/swap

To freeze the screen and enlarge a selected part of the screen, tap
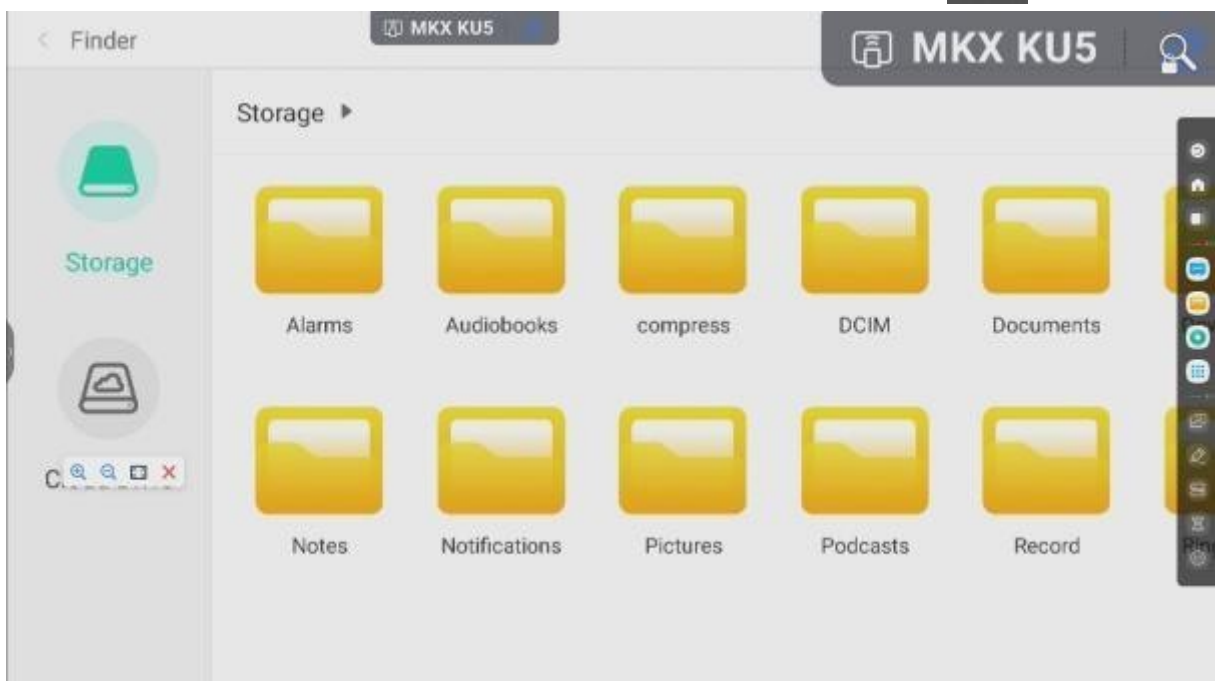
- Tap "**+** " to zoom in.

- Touch "**-**" to reduce the magnification.

- Tap "**Fullscreen**" to return the original screen view without zooming.

- Touch "X" to turn off **Freeze/Zoom** mode**.**

Additional support tools

To open the **auxiliary tools** menu,

- Touch, to turn on the **Stopwatch.**

- Touch, To enable **AirClass** mode**.**

- Touch, to turn on **Spotlight**. You can use this feature to focus your attention

viewers on the part of the screen you want them to look at.

- Touch, to

Lock the screen (optionally set a password).

To customize the toolbar, touch and hold the icon of any tool for a moment. The editing mode will be activated. Use "+" to add another tool to the side . Use "-" to remove a tool from the side toolbar.

How to use AirClass

Touch, to enable AirClass, the audience response function. A dialog box with the connection code will be displayed.
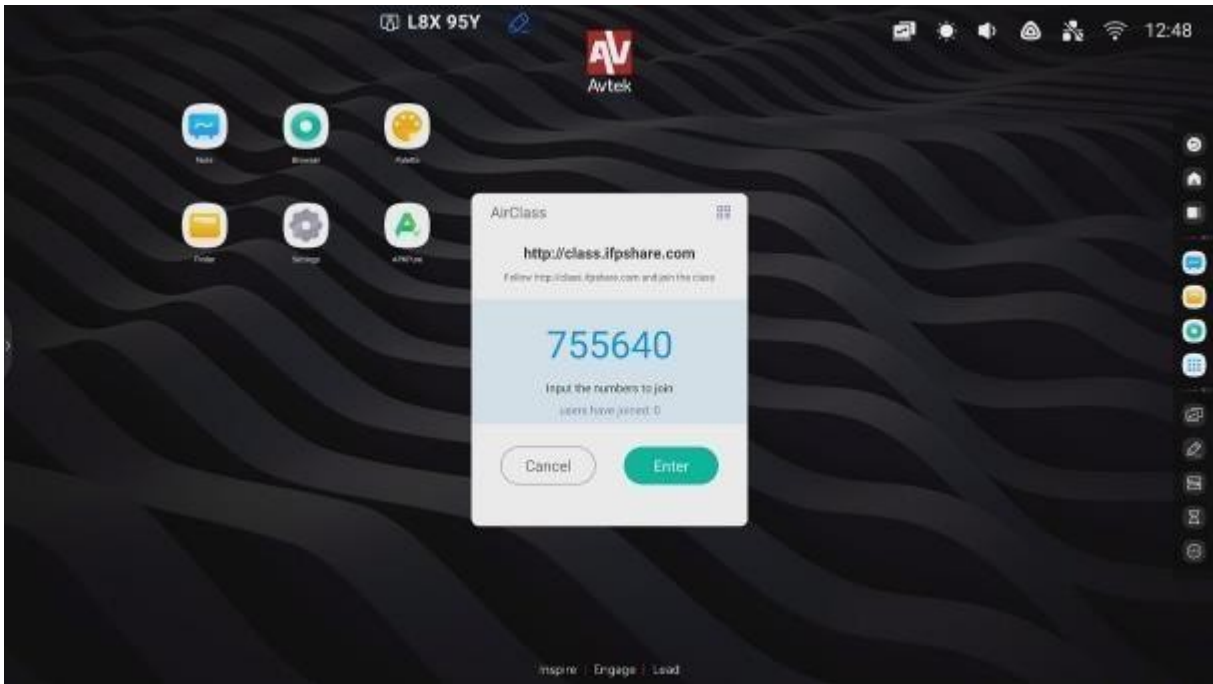
By touching the QR icon in the upper right corner of the window, you can display the QR code.
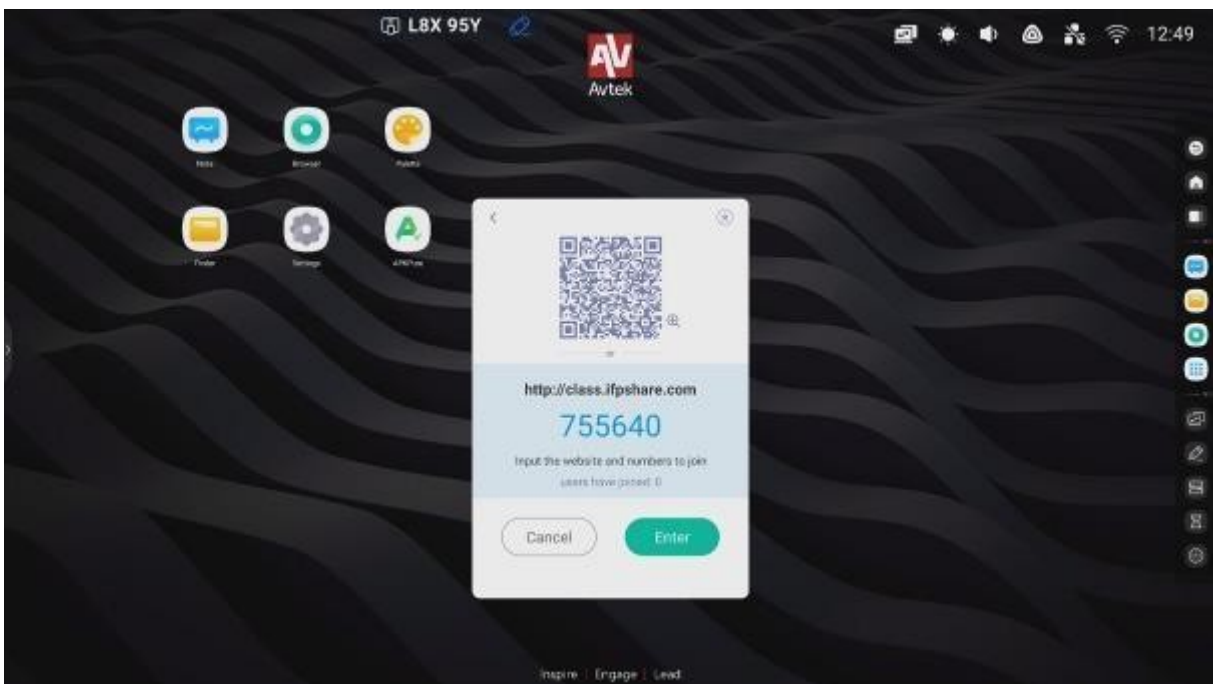
To use the AirClass feature:

1. Connect the interactive display to an available WiFi network.

2. Turn on WLAN (wireless network access) on the devices that will be used by the audience to answer questions. Then connect these devices to the same WLAN (wireless network) to which the interactive display is connected.

NOTE: *All mobile devices used by listeners must be connected to the same WLAN.*

3. Scan the QR code or copy the URL displayed below it into the address bar of your web browser. If you have the latest firmware version installed, you can skip this step and open the page

   http://class.ifpshare.com in the browser and enter there the code shown on the screen.

4. Type your name and press **Enter** to join the class.

5. Tap **Enter Class** to start the session.

NOTE: AirClass is a feature that can only be used to present **answers**. The **questions** that AirClass is used to answer can be presented to the audience, for example, as slides of the Note application, annotations made on images, or can be spoken by the presenter.

AirClass   can be used in the following modes:

- **Voter** [AB CD] (Poll), which can be conducted in single-choice or multiple-choice mode.

- **Responder** (Winner takes all) - the first person to respond their device is designated the winner.

- **Selector** ⬜ (Pick Audience), where a random user - or many random ones users - is selected from among all logged in

recipients.

- **Message**, 💬 which enables/disables sending comments by users.

- Touch the following icons to: redisplay the QR code, export results, exit AirClass.

Voter (Voting)

Scenario example: A question is asked using Note, and answers are collected using Voter single-choice mode.
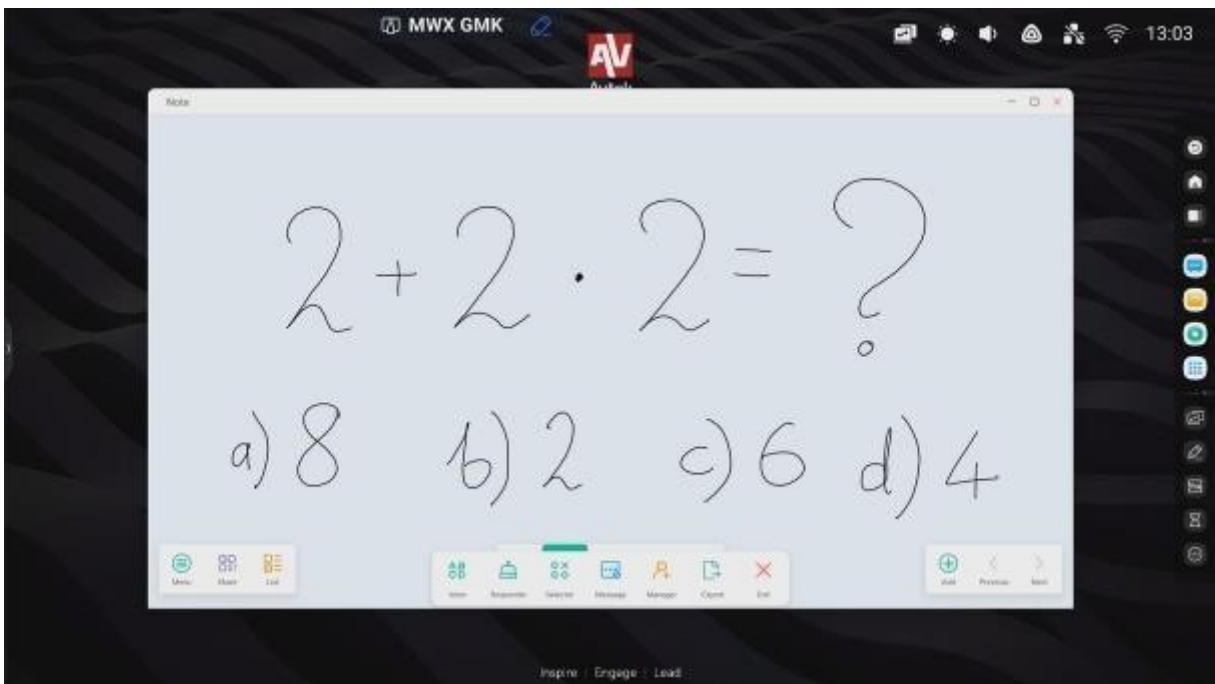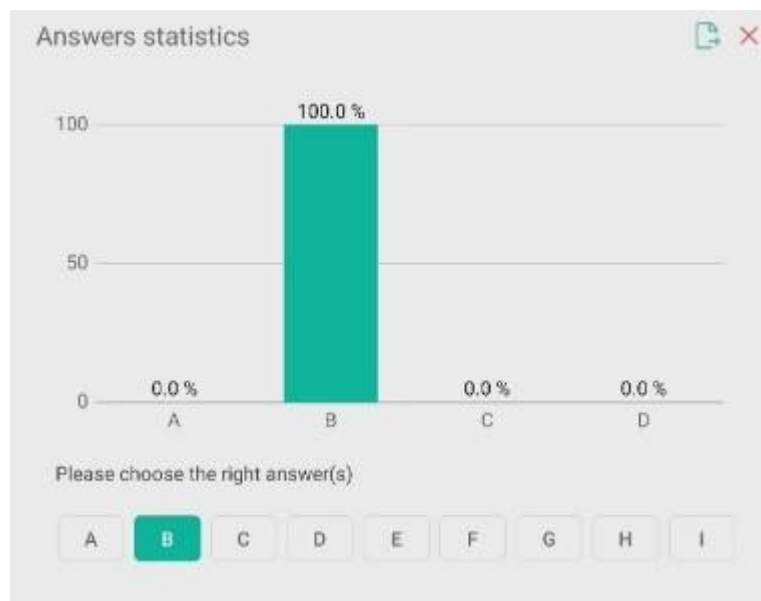

1. To start collecting responses (votes) from the audience, click the **Start** button. The names of users who have submitted their answers (votes) will be marked with blue icons in the list.

2. To finish accepting responses, click the **Finish** button. The response statistics (votes) screen appear.
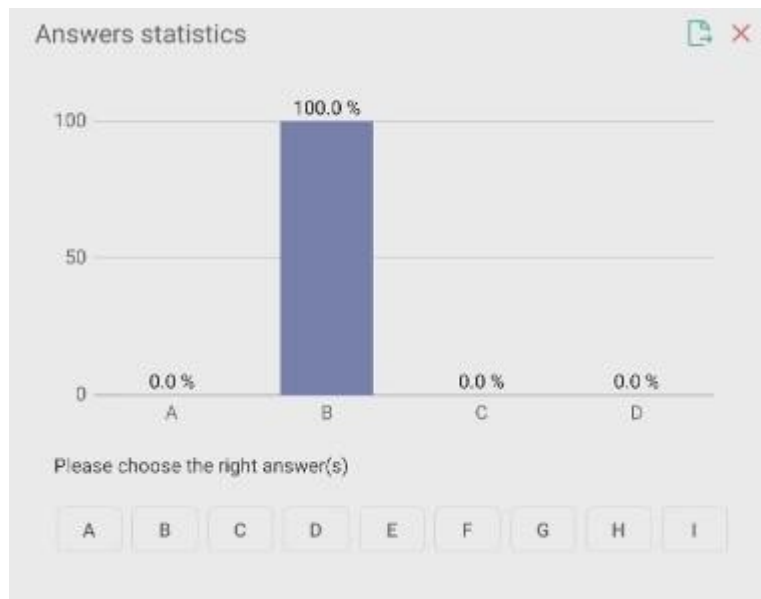
3. Here you can also indicate the correct answer.

Responder *(The winner gets everything)*
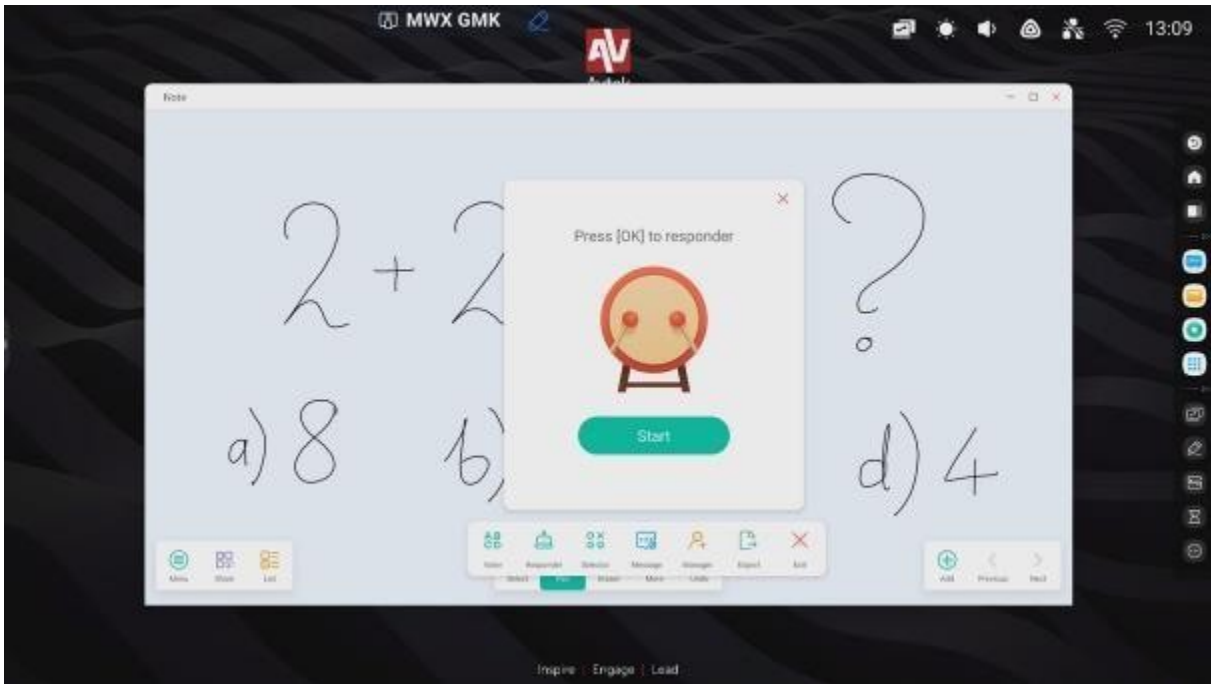
The first user from the audience to answer wins and his name is displayed.

Responder mode can be used, for example, in games in which only the first participant to respond is allowed to respond, or in which the first to respond becomes the winner.

Selector

In this mode, the application will draw one or more participants from among all connected users in the audience.
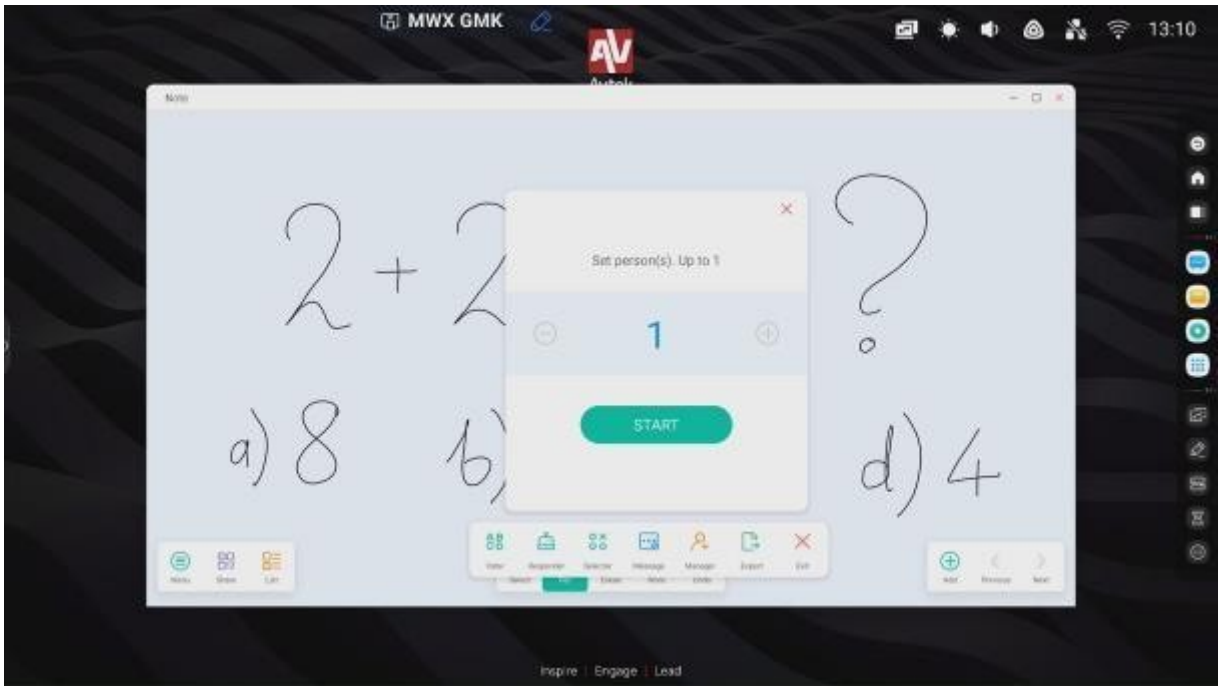
Message

Users can be allowed to send their comments in text format, and these comments are then displayed on the screen.

Note - note-taking application

To launch Note, tap its icon on the desktop:

The application provides a workspace that acts like a virtual chalkboard on which you can write and draw, including making handwritten notes on any images pasted into it.

Basic service
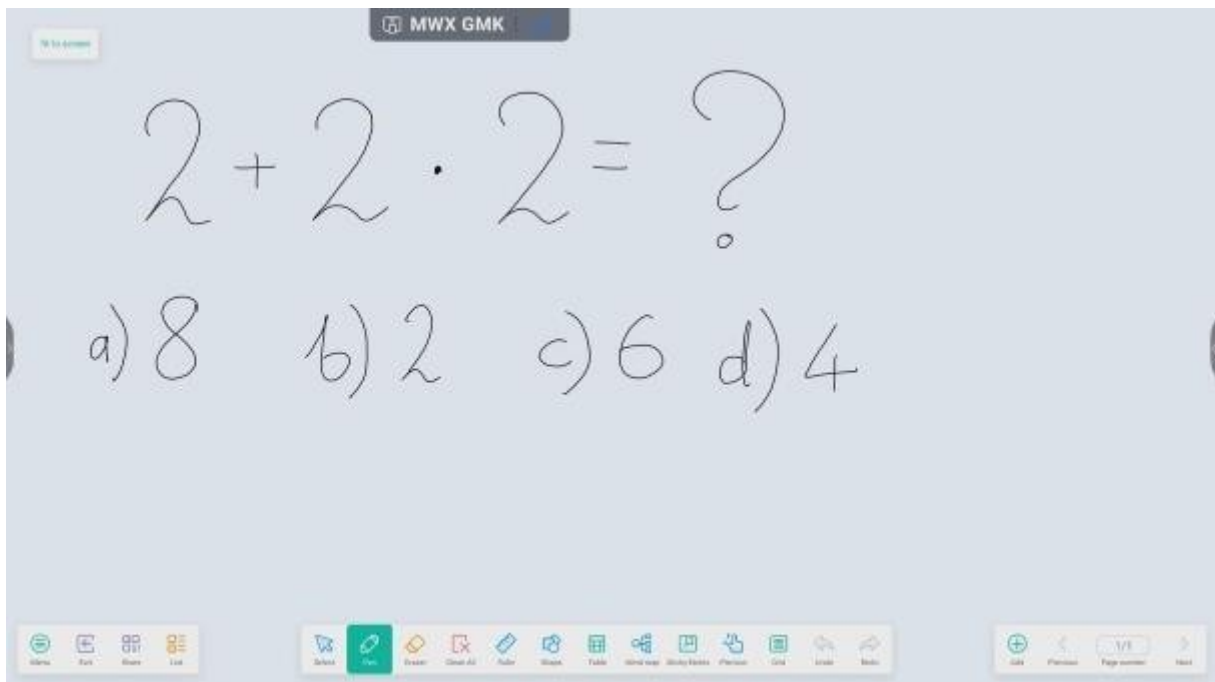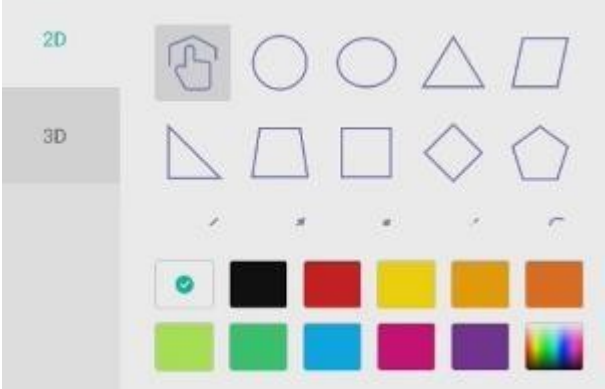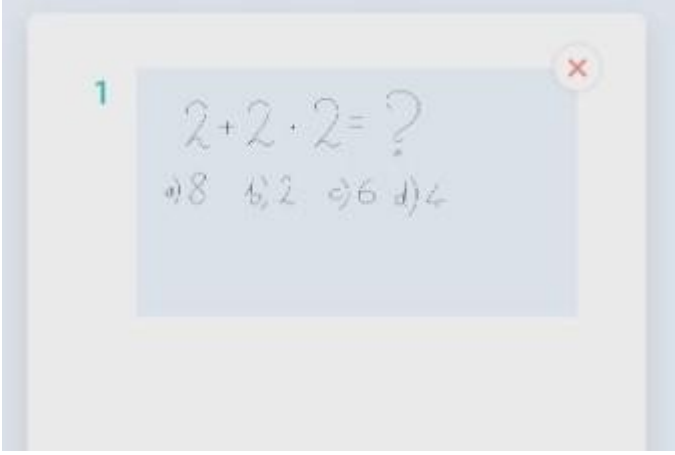
Icon	Name	Action
	Menu	Opens a menu offering additional tools.
	Output	Application outputs.
	QR code	It provides a QR code so users can download all the notes to their devices by scanning it.

		NOTE: *All mobile devices used by viewers must be connected to the same WiFi network as the interactive display.* **NOTE**: *Click the QR code to enlarge it, allowing viewers to scan it even from a distance.*
	List	Creates a list of
	Choose	The cursor can be used to select and move objects in the work area.

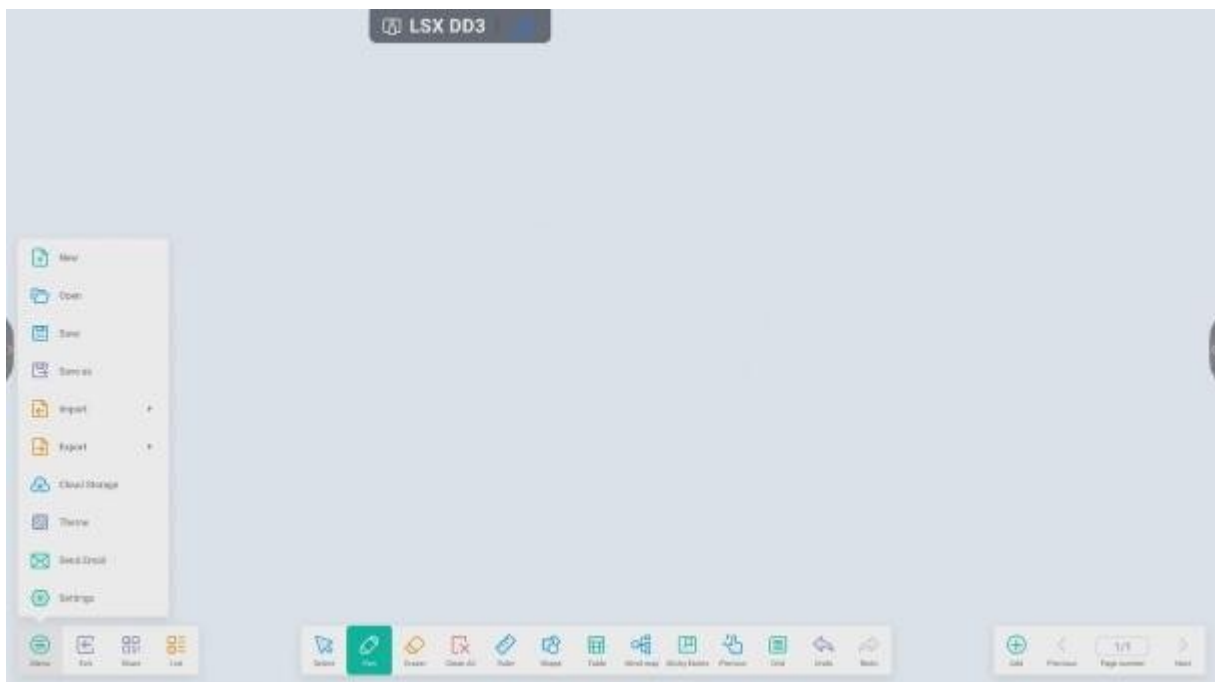|	Pen	Use the pen to write on the work area. Touch again to select the type, thickness and color of the pen.
		Depending on the display model, you can also choose the type, thickness and color of the pen for a variety of thicker or thinner writing tools.
	Eraser	Use it to erase (remove) handwritten annotations and objects. **NOTE**: *You can also erase annotations by placing your entire hand on the screen. Note: this technique does not allow you to erase objects.*
	Clear	Clears the entire sheet visible on the screen.
	Ruler	This function allows you to insert some basic mathematical tools: a ruler, two types of squares and a protractor.

	Shape	Use it to draw objects. Touch again to select the type and color of object you want to draw.
	Table	Inserts a table.
	Map of thoughts	Inserts a mind map.
	Preview	With this function, you can move the entire page and zoom in and out.
	Back	Undoes the last action performed.
	Renew	Undoes the last "backward" operation.
	Cards self-adhesive	Allows you to add annotations using the on-screen keyboard.
	Grid	Allows you to add a grid.
	Add page	Adds new page.
	Previous page	It goes to the previous page.
	Next page	It moves to the next page.

1/1	Page counter	The counter shows how many pages are open and which page is currently displayed. When clicked, it shows a navigation menu that includes a thumbnail preview of each page.

Menu

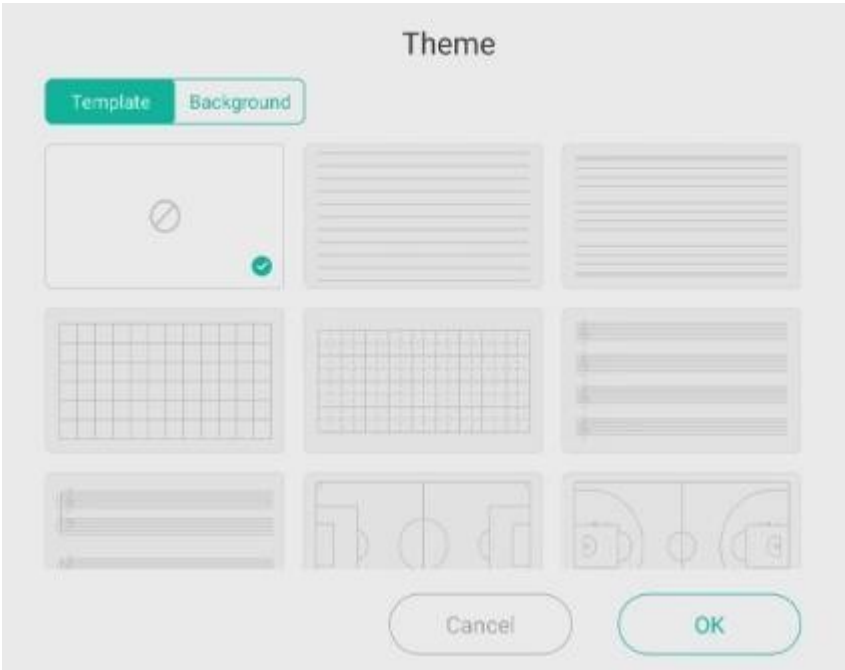| Icon	Name	How it works

	New	Opens a new blank document.
	Open	Opens an existing document.
	Save	Saves the current project.
	Save As	Saves the current project as...
	Import	Use it to import a file into the current page. You can import and embed images, PDF and SVG files. IMG PDF SVG IWB
	Export	Use it to export existing notes, saving them in the file formats listed in the "Import" section.
	Cloud	Sends existing notes to the cloud. This feature is discussed in more detail in the Cloud Drive section later in this manual.

Icon	Name	How it works
	Subject	Use this function to set a plain color, pattern or custom image as the background.
	Email	Allows you to share your project via email.
	Settings	Use Settings to customize some additional features, such as setting the desired brightness level when using the app or disabling the option to draw with two pens at the same time.

System settings

To open the Operating System Settings,

Icon	Name	How it works
	Wireless and Ethernet	Configure wireless network (WLAN), Ethernet, Hotspot, Bluetooth or VPN settings.

	Personalization	Configure the background, multi-window mode and several other custom settings.
	Input and output	Set sound, peripherals or other external audio or video sources here.
	Application	Manage your applications here.
	System	Here you will find basic system settings for your device, such as language, date and time, system updates and security settings.
	About the program	Displays several key details about the device.

Web browser

To open a web browser, click
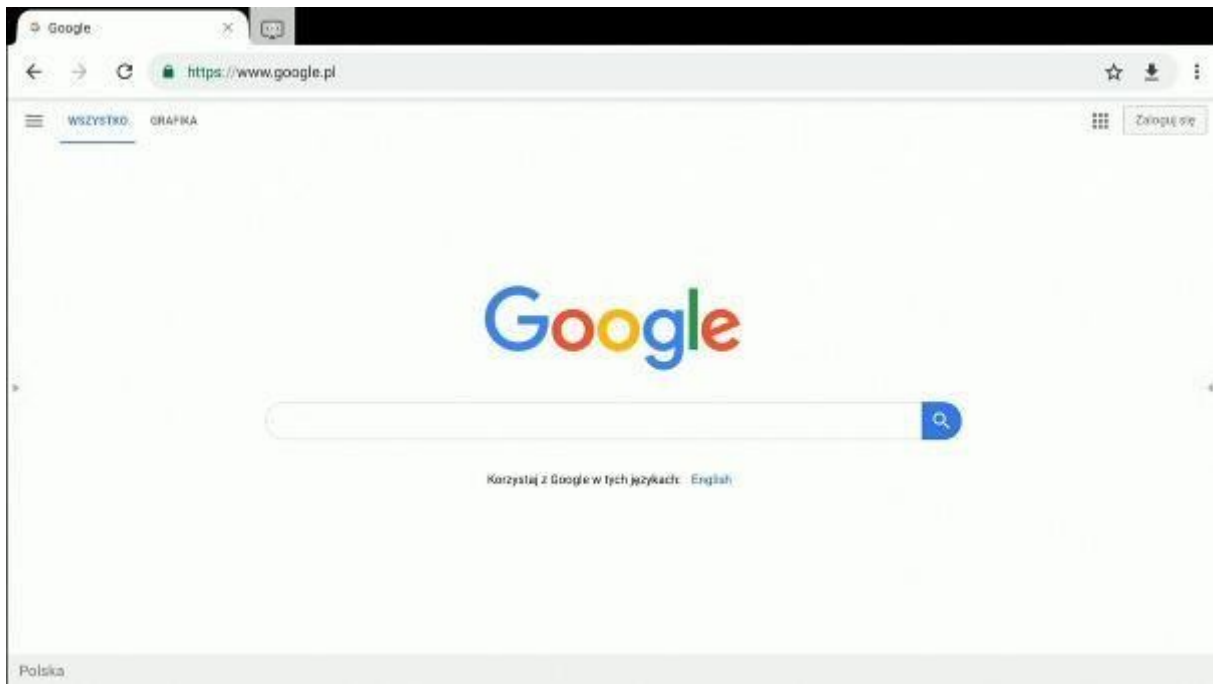
Finder - file manager

Basic service

To open **Finder**,

Finder is a file management application that provides access to files stored in the display's internal memory and on any storage devices that may be connected to it, such as USB flash drives.

Icon	Name	How it works
	Grid/list	Show files on a grid or as a list.
	Sort	Select the method of sorting files here.
	Choose	Turn on mode selection, to much select items.
	New folder	Create a new folder.
	New window	Open another instance of Finder in a separate window
	Copy	Copy the selected item to the clipboard.
	Paste	Paste an item from the clipboard.
	Cut out	Cut the selected item to the clipboard.
	Delete	Deleting the selected item.

[T]	Rename	Edit and rename the selected file or folder.
◁	Send	Share the selected file: - to a connected USB drive - use of QR code - creating a shortcut on the desktop **NOTE**: *All mobile devices used by viewers must be connected to the same WiFi network as the interactive display.*

Set or change the wallpaper

To change the desktop wallpaper of an interactive display, first prepare an image to be used as the new wallpaper. You can download the image file from the Internet or save it to a USB drive.

1. Select the file you want to set as the new wallpaper and double-click it. It will be displayed in a new window.
2. Touch the **Wallpaper** button**.**
3. Select **Set as background.**

Dashboard settings

Abbreviations

You can place shortcuts to applications on the desktop. To add an application to the desktop:

1. Touch and hold the app on the sidebar.
2. Drag the application icon to the display desktop.

Bytello Share

Bytello Share is a wireless screen mirroring (screen sharing) application that allows users of mobile devices or PCs to display their screens on an interactive display connected to the same WiFi network.

NOTES:

All mobile devices used by viewers must be connected to the same WiFi network as the interactive display.

Make sure the interactive display is connected to the Internet. A high-speed Internet connection is essential for smooth operation of screen mirroring.

or.

To open **Bytello Share**, tap the icon.

Compatible operating systems:

  - Windows 7, 8, 10, 11

  - MAC OSX 10.8 or later

  - iPhone iOS 9.0 or later
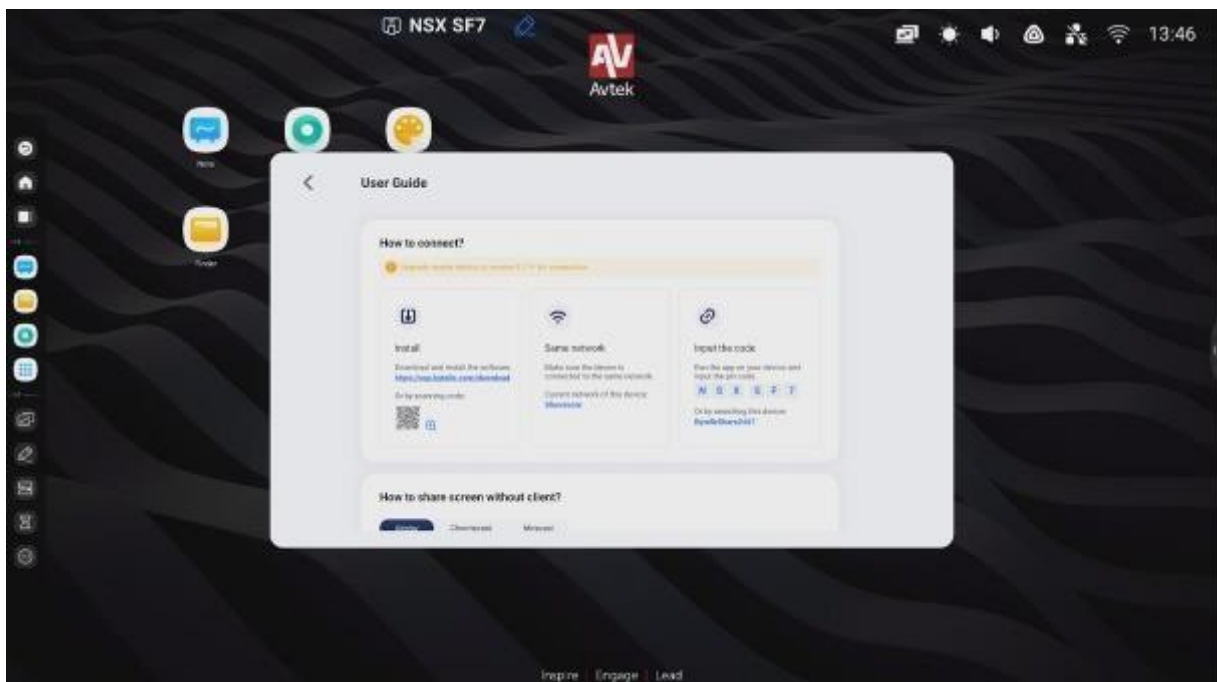
  - Android 5.0 or later

Instructions for mobile users:

1. Download the Bytello app.

If your device runs Android or iOS, you can download Bytello from Google Play or the App Store, respectively.
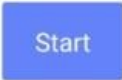
Alternatively, ask the user of the interactive display to tap the

Instructions button and scan the QR code, which will then be displayed using the mobile device's camera.

2. Enter the code displayed on the interactive display in the prompt field shown by the mobile app to pair it with the display.

Click, to start mirroring your mobile device's screen on the interactive display.

NOTE: *Up to four mobile device users can simultaneously mirror their screens on the interactive display.*

To stop mirroring the device screen, click

- Icons allows the following types of content to be sent to the monitor respectively: audio and video files, images and documents. In this mode, before the file will be displayed on the interactive monitor, it will need a reasonable amount of time to be completely uploaded.

- To enable camera video sharing, click the button

In this mode, you can choose the video quality and frame , you can stop the video on the screen at any point.

- Click to use your mobile device screen as a touchpad to remotely control the interactive display.
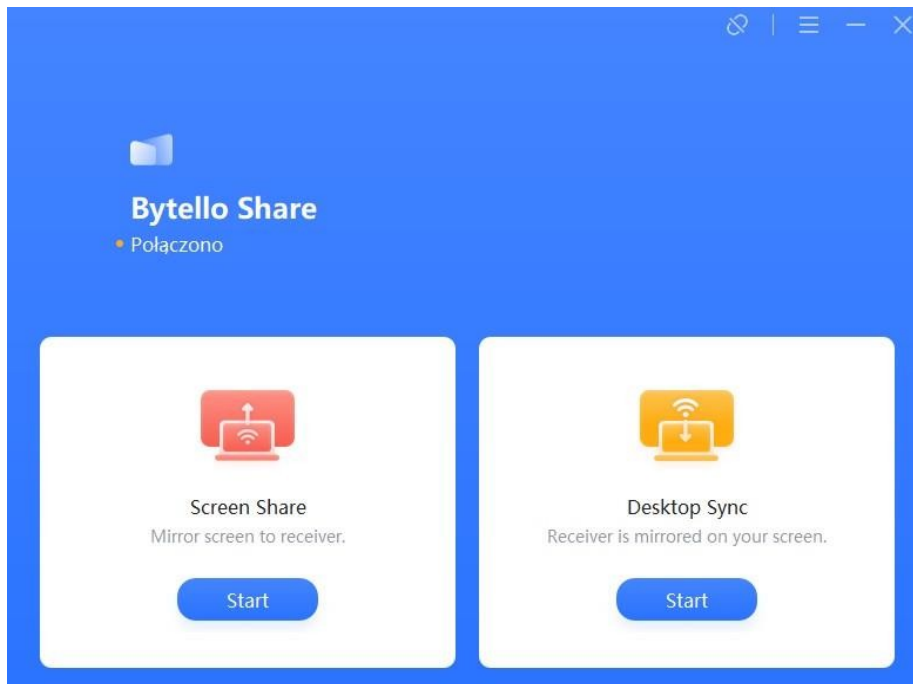
- Click, to reflect the interactive display screen on your mobile device and control the display.

Instructions for PC users

1. Download the PC app by scanning the QR code or copying the URL shown below the code.
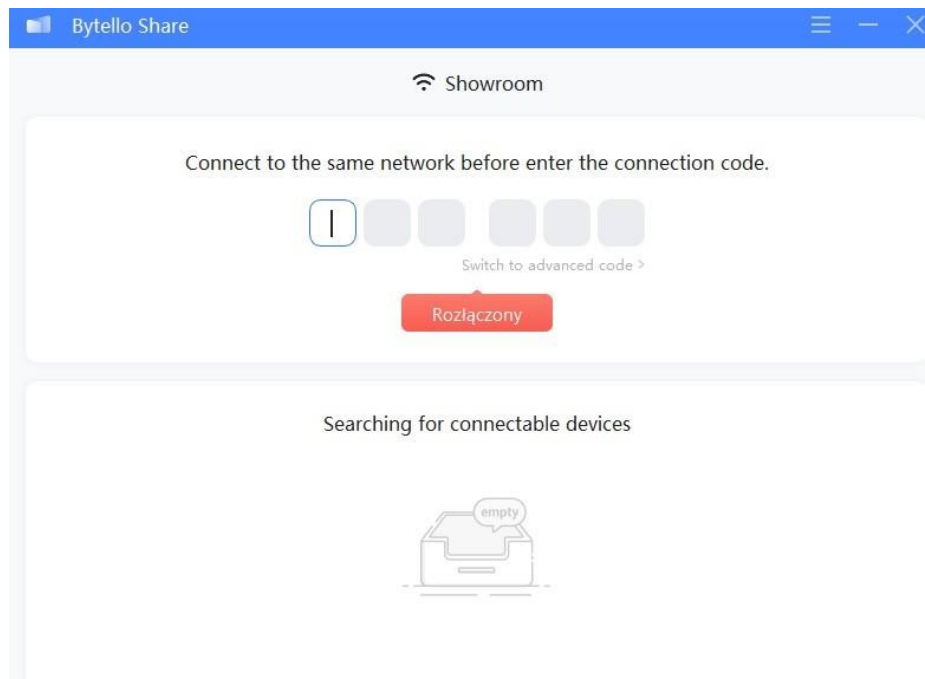
2. Enter the code displayed on the interactive display in the prompt field shown by the mobile app to pair it with the display.

- Click "Screen Share" to start sharing your computer screen on the interactive display.

- Click "Desktop Sync" to start mirroring the interactive display screen on your computer.

The Bytello Share app is also equipped with Chromecast, AirPlay and Miracast features that allow compatible devices to share a screen without separate software.

Firmware updates

Avtek monitor software updates can be done online. While the system is connected to the Internet, it continuously checks for new available updates automatically.

NOTE: *The update function can only update the display's firmware and functions. It does not update the Android operating system, which remains unchanged for the life of the display.*

To manually check the availability of firmware updates, go to **Settings** and tap **the System** tab. Then select **System Update**. Finally, select **Check for updates**.
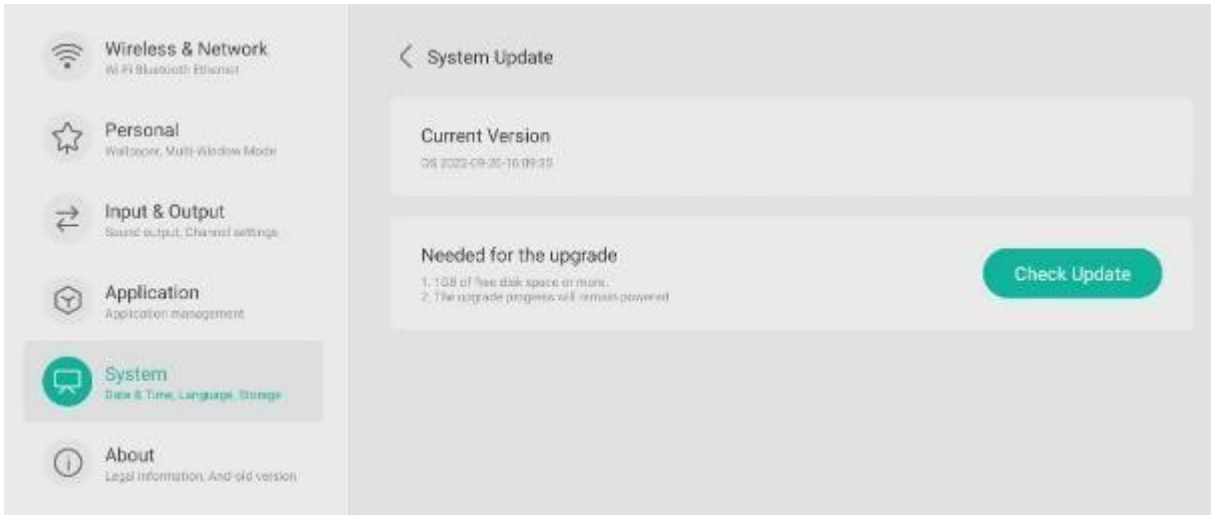
If a new update is available, the system will start downloading it. As soon as it is downloaded, the update will be installed, which will take about 5 minutes.

NOTES: *NEVER*   *DO NOT*   *TURN OFF*   *DISPLAYduring software updates*.

Thank you for using this manual for the Android operating system of Avtek interactive displays!